

## Thermocouple installation instructions

To install the thermocouple, please proceed as follows:

- 1. switch off the power supply to the control unit.
- 2. disconnect the electrical connection between the thermocouple and the thermocouple compensation cable (green cable) or between the thermocouple and the control unit.
- 3 Remove the defective thermocouple.
- 4. if the defective thermocouple is a version without a ceramic protection tube or with a screw plug with an M8 thread, it is not possible to replace the thermocouple directly. Please contact Ulrich Brunner GmbH on 08721 / 771-0. If the defective thermocouple is a version with ceramic protection tube and M12 screw plug, you can place the new thermocouple directly in the place of the defective thermocouple.
- 5. re-establish the electrical connection between the thermocouple and the thermocouple compensation cable (green cable) or between the thermocouple and the control unit as shown opposite.

Thermocouple - connection colors				
	New standard DIN IEC 584		Old standard DIN 43760	
green +	white -	green -	red +	

- 6. switch on the power supply to the control unit.
- 7. if an error message e.g. "fbf" appears on the display after switching on, please check the cable connection up to the thermocouple.
- 8. you can easily check the correct connection of the thermocouple by briefly heating the tip of the thermocouple (e.g. with a lighter). If the temperature in the display rises, everything is OK. If the message POL appears on the display, the + and have been reversed when connecting the thermocouple.

Please note: Do not leave the compensation line in contact with the heating gas pipe / heating gas connection!

Work on the 230 V mains may only be carried out by authorized specialist companies!



Art.Nr.: 19977