


INSTALLATION INSTRUCTIONS FOR DOOR CONTACT SWITCH

The door contact switch for the EAS / EOS is supplied as a spare part as a complete assembly suitable for the respective device type and can usually be completely replaced. If, for structural reasons, it is necessary to pull the plug-in contacts off the switch component for installation, please note the adjacent color coding when reconnecting.

We recommend continuing to use the existing supply line to the door contact switch, provided that it does not show any recognizable defects. In this case, pull the contacts from the door contact switch, insert the new door contact switch and connect the supply line according to the adjacent color coding.

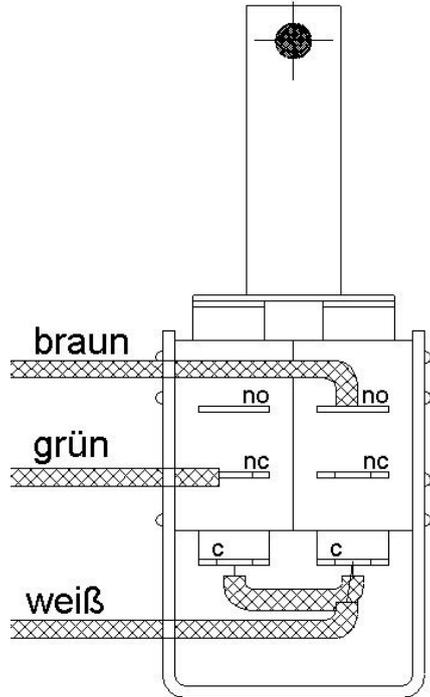

Im. 1: Terminal diagram door contact switch


- contacts c switch is bridged
- weiß/white to contact c
- grün/green to contact nc switch 1
- braun/brown to contact no switch 2



CAUTION: If the color coding is not observed, the function of the EAS / EOS is not guaranteed

Risk of deflagration!

Function test: When the stove door is opened, the drive must move to the "heating up position" (see EAS / EOS operating instructions).

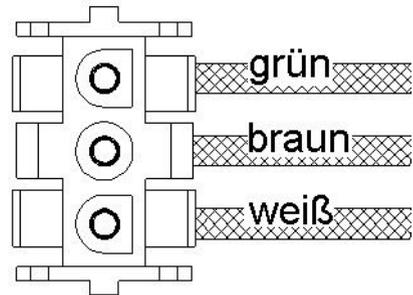

Im. 2: Terminal diagram connector (top view)

Ulrich Brunner GmbH

Zellhuber Ring 17-18

D-84307 Eggenfelden

Tel.: +49 (0) 8721/771-0

Fax: +49 (0) 8721/771-100

Email: info@brunner.de

Art.Nr.: 202551