


FIREPLACE INSERTS FROM BRUNNER

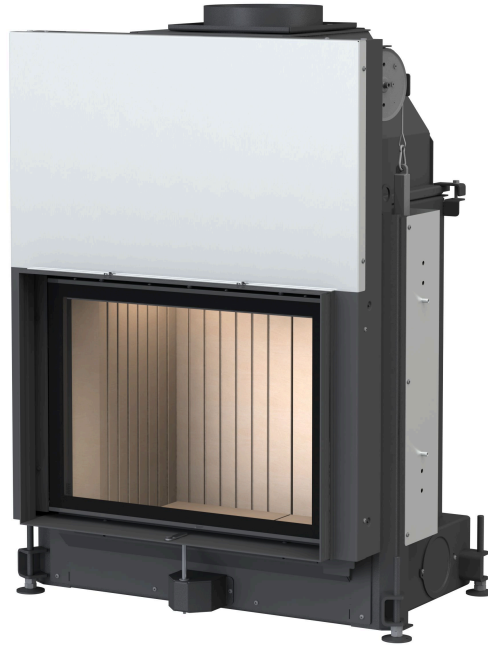

Stil-Kamin 51/67



lifting door

State: 2023-08-22





BRUNNER[®]
made in germany.

Dimension sheets - Stil-Kamin 51/67 lifting door

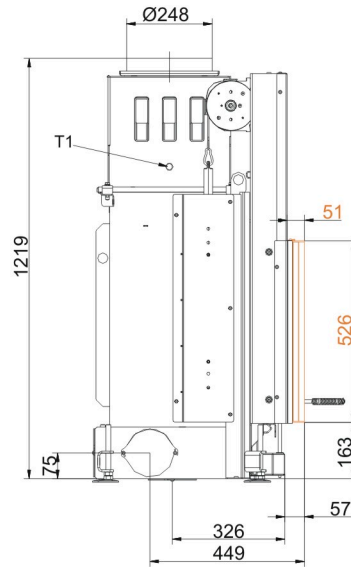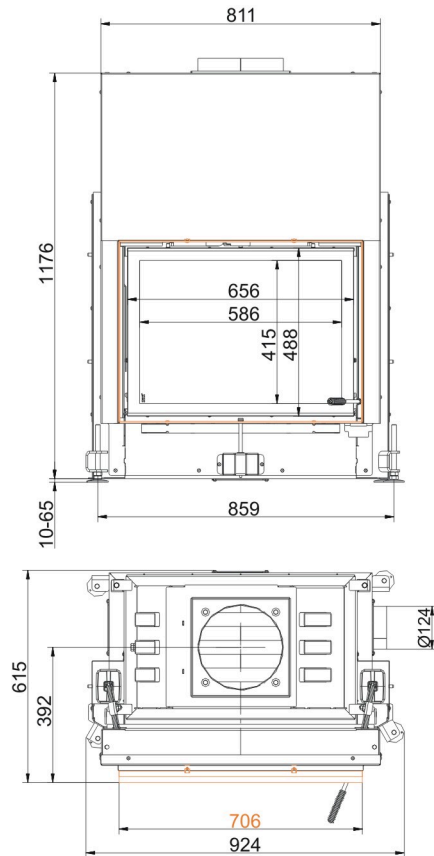


... with mounting frame 50 mm

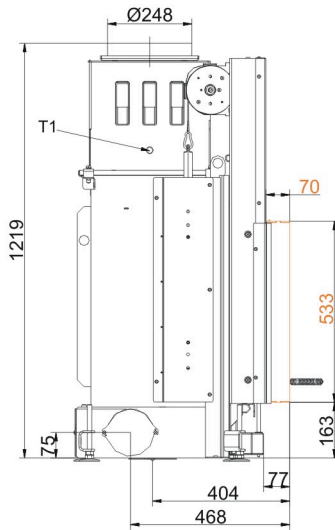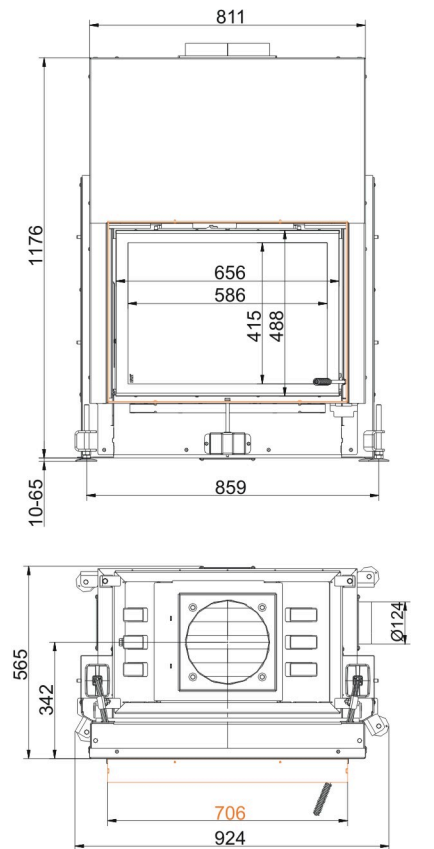

... with mounting frame 70 mm

Dimension sheets - Stil-Kamin 51/67 lifting door

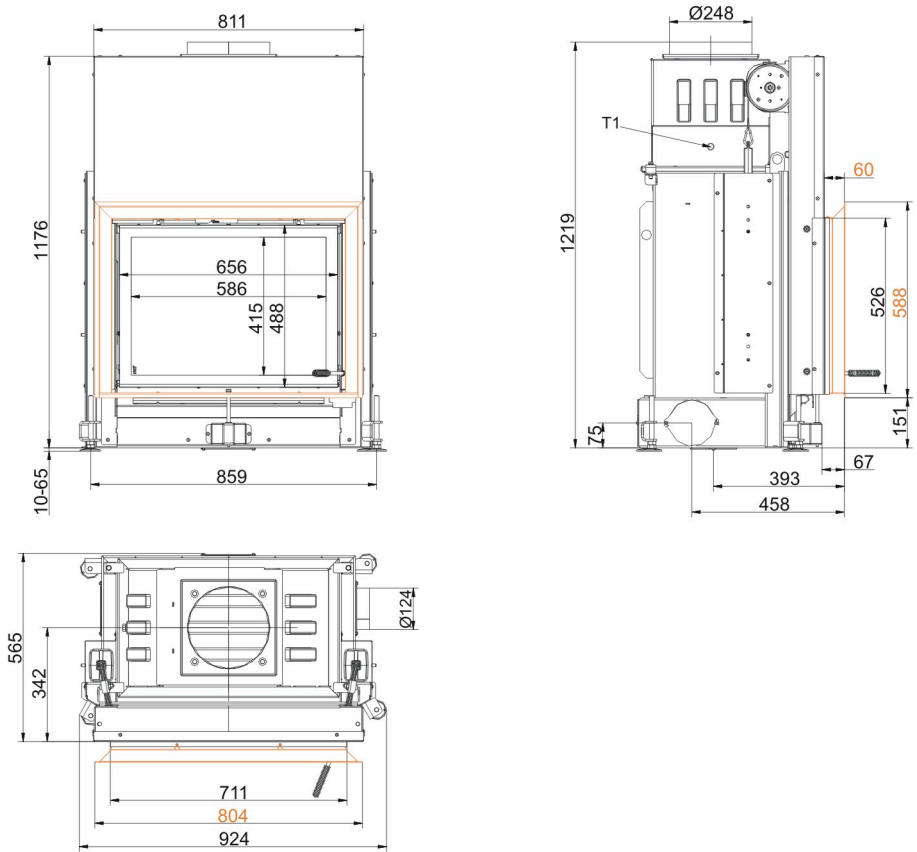

... with door frame

We suggest for CAD planning Palette CAD. Permanent updated drawings: www.brunner.de
 Frames/ flue gas outlet connection/ combustion air supply connection/ front variants/ support bearing are marked in color.

Planning and installation - Stil-Kamin 51/67 lifting door

Tested according to		EN 13229 W	EN 13229 WA
Values measured at		Rated power ¹⁾	Storage operation ²⁾
Suitable for all construction types according to rules		OK	OK
Data for functional demonstration			
Rated heat power	kW	13	-
Fire wood volume	kg/h	4.1	5
Combustion performance	kW	16	23
Flue gas mass flow	g/s	10.8	22
Flue gas temperature after:			
metallic hot air hood	°C	220	250
Necessary supply pressure	Pa	12	13
Combustion air consumption	m ³ /h	40	50
Combustion air connection Ø	mm	125	125
Heat distribution			
Insert / reheating surface	%	30 / 30	30 / 30
Glass pane (single / double)	%	40 / -	40 / -
Cross-section of gratings ³⁾			
Convection air	cm ²	700 / 200 / -	700 / 200 / -
Supply air	cm ²	700 / 200 / -	700 / 200 / -
Minimal oven surface for closed construction type			
Heat dissipating surface	m ²	5.5	5.5
Minimal distances of the fireplace			
to cladding, insulation layer	cm	6	6
to mounting floor	cm	2	2
Thermal insulation without / with air gratings ⁴⁾			
Mounting wall	cm	18 / 14	18 / 14
Floor	cm	2	2
Ceiling	cm	28 / 20	28 / 20
Brick lining for combustible wall	cm	10	10
Weight			
Fireplace / combustion chamber	kg	193 / 79	
Meets requirement/limit values for:			
Germany/ Austria / Switzerland / Norway		1.BImSchV (Stufe 2) / 15a BVG (2015) / LRV / NS 3059	

- 1) Indications to "Rated power" determined with metallic reheating surface
- 2) Indications to "Storage operation" for the manual execution of the reheating surface (guide values).
- 3) for fireplace inserts / flue gas pipe / metallic reheating surface
- 4) Values determined with upper air cross-sections; stove cladding is heat emitting.