

Installation manual

GOF 50x35 für KK-GOT

©2023

BRUNNER[®]
made in germany.

CONTENTS

| | | |
|----|---|----|
| 1 | Delivery contents..... | 3 |
| 2 | Basic informations..... | 4 |
| 3 | Equipotential bonding and lightning protection..... | 4 |
| 4 | Product description..... | 5 |
| 5 | Requirements for location..... | 6 |
| 6 | Combustion air..... | 7 |
| 7 | Assembly of GOF masonry heater firebox..... | 9 |
| 8 | Mounting instructions for EAS / EOS variants..... | 14 |
| 9 | Chimney and smoke pipe connection..... | 15 |
| 10 | Approved insulation materials..... | 16 |
| 11 | Drawings and technical data..... | 17 |


1 DELIVERY CONTENTS

The GOF always consists from a fireclay combustion chamber and an insulated post-combustion chamber. Around this firebox, an external shell is built from fireclay plates.

- Combustion chamber (for exact number and description of fireclay stones, please refer to List of Parts)
- Insulated post-combustion chamber with deflector and sealings
- Base frame with connection blocks
- Masonry heater door
- Accessories kit
- Tunnel variants have an additional flexible hose for combining the combustion air supply connections, and a blind cap.

The masonry heater kit includes the following assembly materials:

- 1 bucket of Brunner FM 1300 (Art. No.: 900129)
For assembly of combustion chamber linings and masonry heater firebox interiors. FM 1300 is a fireclay mortar, which is adapted to thermal expansion properties of our combustion chamber linings. The recommended application allows for temperatures up to 1300°C.
- 1 sack of Brunner Universal 600 (Art. No.: 900384)
The Brunner Universal 600 is a setting and plastering mortar with application temperature up to 600°C. It is used in assembly of our fireplace construction plates, stove setter's fireclay bricks and for plastering of stove exteriors. Especially the plastering works are easy to perform. It can be used also for fixing of Brunner glassfiber mesh.
The pot life during assembly is limited to approx. 30 minutes. For plastering works it is limited to approx. 50 minutes.
- 1 cartridge of high temperature sealing paste (Art. No.: 900269)
The high temperature sealing paste (D) is used for sealing of gaps between the combustion chamber and the external stove cladding around the heating gas outlet.

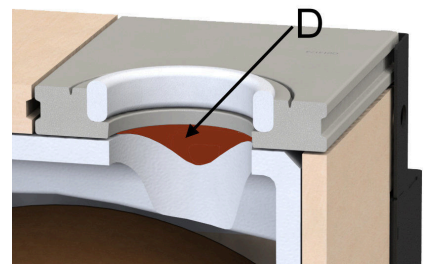

Please check delivery contents for completeness and damage. Missing or defective parts must be immediately reported to the shipping company!

Please observe the installation instructions provided with the masonry heater doors.

2 BASIC INFORMATIONS



All instructions delivered with products must be observed. We do not accept any warranty claim or liability for damage resulting from failure to observe these installation instructions! Improper installation can cause injury and material damage!

The installation may only be carried out by a registered specialist.

Fireplaces equipped with a water boiler must be pressure-tested after hydraulic connection to the heating system. Masonry work may follow only after this pressure test. Ulrich Brunner GmbH does not cover any costs incurred by necessary dismantling of masonry for rework at water boiler installation or replacement of the boiler.

The floor space of the room must have a suitable structure and sufficient dimensions to ensure proper functioning of the fireplace.

Please note that other installation and assembly instructions are included in other packaging units!

Dimensioning of downstream heat accumulator must be according to valid stove-setting rules.

During installation of the fireplace, all dimensions and minimal clearances of the fireplace casing must be held as specified by the manufacturer.

Fireplaces that meet the requirements of DIN EN 13240 or DIN EN 13229 and that can only be operated as intended with closed combustion chamber door or that have a self-closing firebox door are suitable for multiple occupancy.

All binding national or EU standards and local regulations for the installation of fireplaces must be observed.

All valid stove fitting rules and regulations of local construction law must be observed and followed.

Please follow the relevant regulations of your country.

When these instructions are followed and all works are done properly, this will ensure a safe, energy-saving and environmentally friendly operation of the stove. Pictures shown are not to be considered as complete representations of any kind.

Subject to technical and assortment changes.

Please notify your supplier of any damage which might have occurred during transport.

Please keep these instructions.

3 EQUIPOTENTIAL BONDING AND LIGHTNING PROTECTION



ATTENTION - lightning protection, earthing, equipotential bonding.

When connecting fireplaces with / without power connection to metallic exhaust systems (stainless steel exhaust systems, metal chimneys, refurbished chimneys, ...), the national regulations and existing association guidelines must be observed. The requirements and the design of lightning protection systems, surge protection as well as earthing and equipotential bonding for exhaust systems are regulated.

Equipotential bonding and surge protection (“internal lightning protection”) have been mandatory in new buildings since 2016. Equipotential bonding is therefore required by law for metallic exhaust systems. Metallic chimneys must always be integrated into the building's earthing system. If there is also a lightning protection system (“external lightning protection”), the exhaust system must be integrated into the lightning protection system.

The measures provided in individual cases must be carried out by qualified electricians and / or lightning protection specialists.

Overvoltage protection measures for electrical and information technology systems are not dealt with in the standards mentioned and must be created individually on site via the fine protection / terminal device protection.



The legally provided equipotential bonding is not covered by the connection of the fireplace with / without a power connection to the protective conductor!



In case of damage to current-carrying components caused by non-professional measures for lightning protection, earthing and equipotential bonding, there is no entitlement to guarantee and warranty.

4 PRODUCT DESCRIPTION

With the GOF firebox, we offer a complete kit for a traditional masonry heater. The individual components are easy to assemble and offer the possibility to create a masonry heater with an exactly defined and tested firebox. The GOF includes a prefabricated combustion chamber with post-combustion zone.

The heating gas outlet for connection of ceramic duct must be provided on site. For optimal performance, it should be located in the rear top area of post-combustion chamber. Only this will ensure optimal combustion.

Optional the traditional masonry heater is available with a connection stone in order to build the complete storage space with a an MSS block set.

5 REQUIREMENTS FOR LOCATION

Possible locations for a wood-burning stove or fireplace are only such rooms, where no danger can occur, if only the instructions for use are being followed and the system is properly used. The state, structure and intended use of the room must be considered, when choosing the location.

Please consider the massive weight of the system. If the floor is not strong enough to bear such load, it has to be distributed by suitable means.

A heating device **may not be located** in the following rooms:

1. Where sufficient volume of combustion air is not guaranteed.
2. Where flammable materials or explosives are stored, manufactured or processed.
3. Which are commonly accessible. Stairways in residential buildings with access from only two flats are not considered as commonly accessible rooms.
4. Where exhaust fans of ventilation or air heating systems are running, unless safe operation of the fireplace is ensured. This is ensured, when:
 - The systems are causing only circulation of air within the room.
 - The systems are equipped with safety devices, which automatically and securely prevent negative pressure in this room.
 - If simultaneous operation of fireplace and ventilation systems is prevented by safety devices.
 - If the total negative pressure level caused by the stream of combustion air of the fireplace and the airflow volume of the ventilation systems in this room and other rooms included in one ventilation system does not exceed 0.04 mbar. This must be ensured even if easily accessible controls of the ventilation system are being manipulated or removed.
 - If exhaust gas flow is being monitored by special safety devices.
 - If the construction type or dimensioning of the systems are excluding the possibility of dangerous negative pressure.

Please consult the location of your fireplace, chimney connection and combustion air supply with your local chimney sweep.

6 COMBUSTION AIR

Sufficient combustion air supply

A fireplace may be installed only in rooms, where sufficient combustion air supply is guaranteed. Normal operation requires sufficient air supply using a separate **combustion air connection** for the fireplace.

Sufficient combustion air supply is present, when by natural means or using technical equipment a combustion air volume of 12,5 m³ per 1 kg fuel throughput can stream into a room with wood-burning fireplace over a period of 1 hour at calculated negative pressure below 0,04 mbar (4 Pa) against outside air pressure. This is equivalent to a speculative heating power (PLF) of 8 kW per 1 kg fuel throughput.

When other fireplaces are in operation in the same room or different rooms included in one room combination, these fireplaces require at least 1.6 m³ of combustion air per hour for each kW of their total rated heating power. When a room combination contains only a small volume of air and the building is relatively airtight, a separate combustion air supply from outdoors is required.

Combustion air supply is ensured in rooms with at least one window or one door which can be opened to outside of the building, or when these rooms are directly connected or interconnected with other rooms of such type. Rooms considered as directly connected or interconnected, can be only parts of one apartment or one facility of other kind. Particular attention to combustion air supply is to be paid, when exhaust fans and other heat generators in the same room combination are operated, or when multiple heating devices are connected to one single chimney.

Ventilation systems in this room combination cannot create negative pressure, which could affect the functioning of the fireplace. Exhaust ventilation systems operating in the same room or room combination together with fireplaces, can cause many problems.

Combustion air ducts

Stoves and fireplaces with BRUNNER heating inserts are classified by law as indoor air-dependent fireplaces.

The combustion air can be supplied from outside via a sufficiently dimensioned pipework. This for BRUNNER heating inserts are fitted with a combustion air connection piece. To avoid draughts in the room, the outside air connection should be routed to this combustion air connection piece. The outside air connection can also be established via a suitable chimney with integrated combustion air duct. Corresponding products have a separate combustion air shaft or an air duct between the casing brick and flue gas pipe

The combustion air duct must have sufficient cross-section. It must be laid using the shortest way and without unnecessary bends, to reduce flow resistance. Combustion air duct dimensioning must be according to EN13884; flow resistance has to be estimated by calculation and must be taken into account!

Components of combustion air duct must be made of non-flammable, dimensionally stable and abrasion resistant materials (DIN 4102 A1 or Class A1(B2) according to DIN EN 13501-1); they must ensure tightness and be accessible for inspection and cleaning.

Thermal insulation is necessary from the fire-protection point of view, if air temperatures >85°C are possible.

Temperatures below dew point can cause water condensation, therefore appropriate insulation must be used.

For buildings with more than two storeys and when crossing fire protection walls, the construction of these ducts must prevent fire and smoke from penetrating other fire protection zones (their components must have a fire resistance rating of >90 minutes (F90)). See also national building law.

If the external air supply duct has a separate flap for closing, the position of this flap must be recognizable. It must be ensured, that the external air supply flap is open until the fire is burning. Air suction grilles or flaps cannot narrow the free cross section.

Remember about noise protection!

7 ASSEMBLY OF GOF MASONRY HEATER FIREBOX

Basics

The assembly of a masonry heater firebox requires a flat and even surface. Fine adjustments are possible by turning the 1 1/2" hexagon caps (X).

The heating gas outlet for ceramic duct connection must be provided on site. As a first step, the fireclay plates and ceramic fibre insulation must be cut to create required openings. Do not use any fast-speed power tools during works at insulating cover. Ensure sufficient ventilation!

The fireclay combustion chamber including the supplied external plates must be assembled on support frame (Y). When a gap of 3 mm between the elements of firebox is held, there should be a free space of approx. 5 mm on both sides and on the back of steel frame.


The masonry heater door (Z) must be set according to its accompanying instructions. Attach the masonry heater door (Z) to the base frame (Y) using screws and align to level.

We recommend to place a piece of cardboard between the combustion chamber linings and external plates to avoid mortar residues, which could lead to cracks caused by thermal stress. This piece of cardboard should be removed before the top cover is laid.

A strap of felt which is supplied with the heat storage should be laid between the masonry heater door and fireclay linings.

The post-combustion chamber is laid from above on top of the combustion chamber assembly. The post-combustion chamber cannot be assembled later through the firebox door.


After the assembly is complete, fit the rear steel angles (V) and place the tensioning bracket (W) over the external shell, and affix with screws to the masonry heater door.

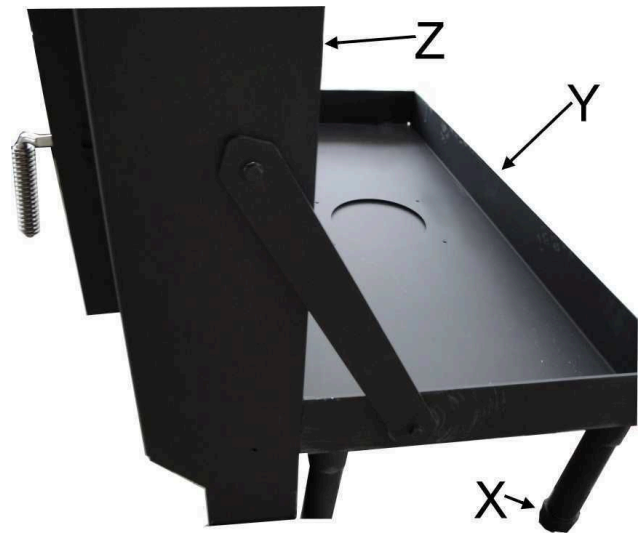

Im. 1: Support frame assembled with GOT




Im. 2: Felt strap

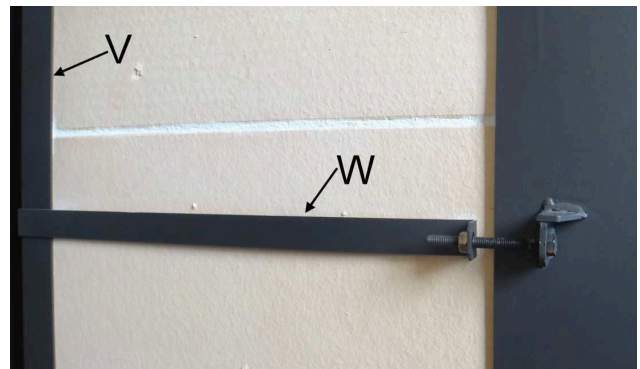

Im. 3: Tensioning bracket assembly


If EAS/EOS is equipped, then the angle bracket for thermocouple (W) must be assembled on the flat deflector side. To prepare a hole for the thermocouple (E), we recommend the use of attached drilling jig (drilled screw). Mount it on the angle bracket and use it to drill a hole through the fireclay plate and post-combustion chamber lining.

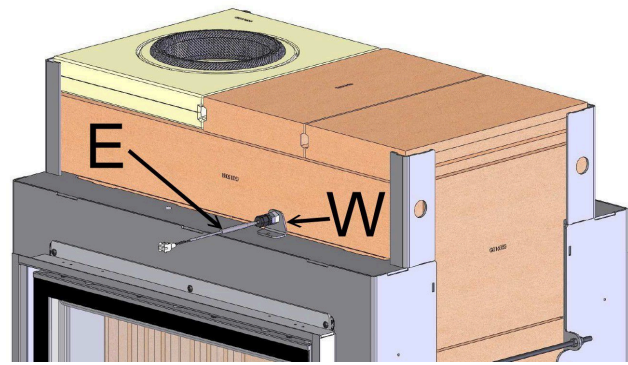

Im. 4: Thermocouple

Before assembly, all stones should be unpacked and examined. We recommend a dry test assembly to check, if all stones are present and assembled in the right places.

Components of GOT Eck 45/67/44 ZL-L with GOF 50x35

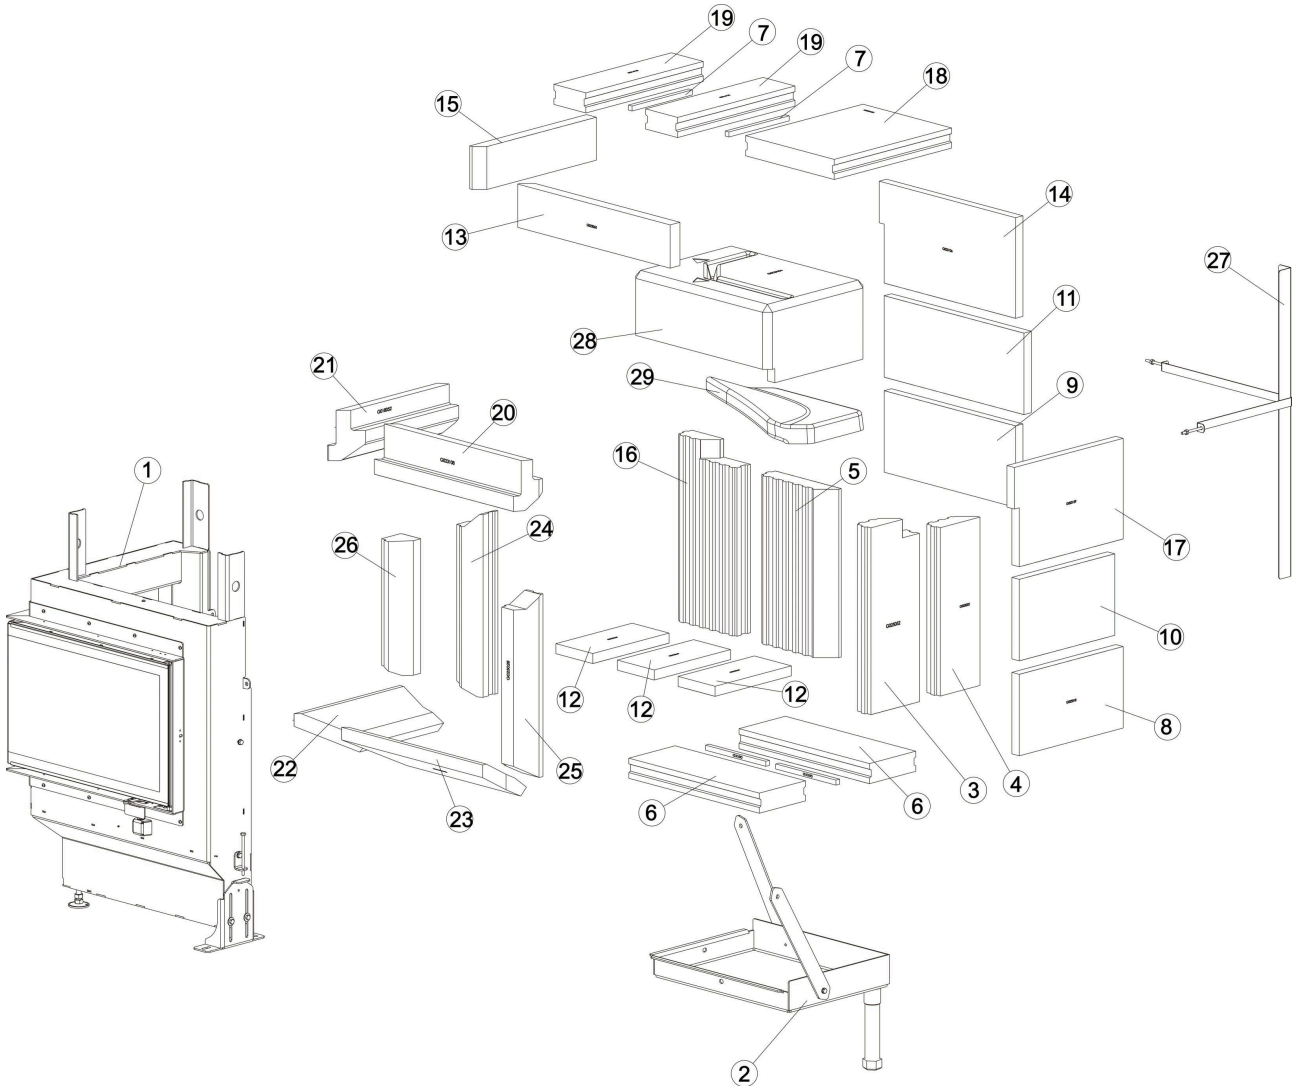


| Item | Part no. | Designation | Item | Part no. | Designation |
|------|------------------------------|---------------------------------|------|----------|---|
| 1 | G025049-01 /-02 /-05 /-06 | GOT door assembly 45-67-44 ZL-L | 2 | G023113 | Support frame assembly 49x35 - L |
| 3 | G025052 | Sidewall stone 557x204x62 - L | 4 | G025022 | Corner stone 45° 502x168x62 |
| 5 | G025025 | Corner stone 45° 502x275x62 | 6 | G023059 | Base stone 530x188x60 |
| 7 | G013121 | Spring | 8 | G025018 | External plate 243x422x30 |
| 9 | G025021 | External plate 243x534x30 | 10 | G025019 | External plate 243x388x30 |
| 11 | G025020 | External plate 243x568x30 | 12 | G023069 | Combustion chamber bottom 310x150x30 |
| 13 | G023063 | Front stone 629x129x40 | 14 | G023126 | External plate 300x554x30 |
| 15 | G018062 | Front stone | 16 | G025051 | Sidewall stone 557x244x62 - L |
| 17 | G023129 | External plate 300x442x30 | 18 | G023123 | Connecting piece for vertical smoke pipe |
| 19 | G023122 | Base stone 477x130x60 | 20 | G023108 | Front wedge top long - L |
| 21 | G018052 | Front wedge top left | 22 | G018051 | Left side wedge |
| 23 | G023109 | Wedge stone long - L | 24 | G025029 | Left front wedge |

| | | | | | |
|----|---------|---------------------------------------|----|---------|-----------------------|
| 25 | G025028 | Right front wedge | 26 | G025054 | Front wedge right - L |
| 27 | G025030 | Tensioning bracket assembly GOF 50x35 | 28 | G023104 | ISO hood - L |
| 29 | G023105 | Deflector plate - L | | | |

The outer stones are clayed with Brunner Universal 600 mortar.

The stones of the firebox are processed with FM1300 mortar.

Components of GOT Eck 45/67/44 ZL-R with GOF 50x35

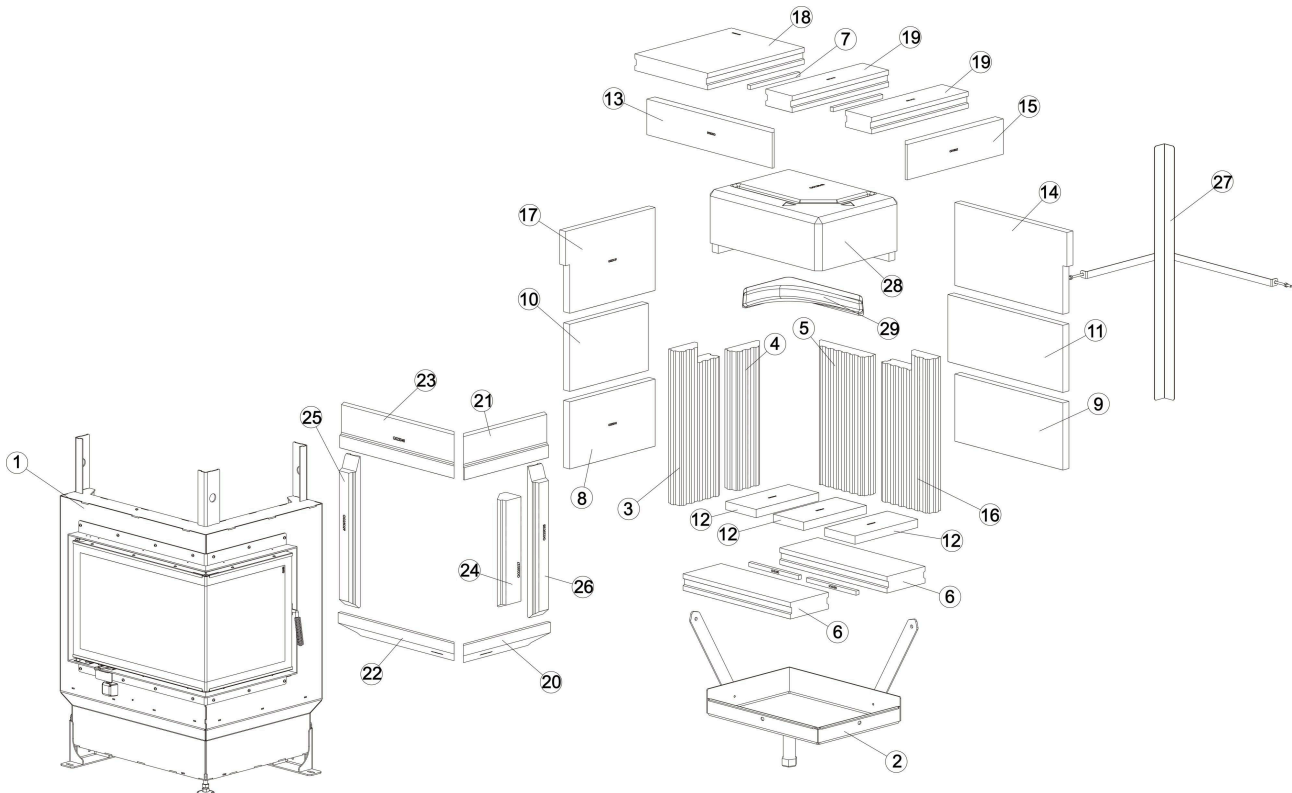


| Item | Part no. | Designation | Item | Part no. | Designation |
|------|---------------------------|---------------------------------|------|----------|--|
| 1 | G025015-01 /-02 /-05 /-06 | GOT door assembly 45-67-44 ZL-R | 2 | G023068 | Support frame assembly 49x35 |
| 3 | G025023 | Sidewall stone 557x204x62 | 4 | G025022 | Corner stone 45° 502x168x62 |
| 5 | G025025 | Corner stone 45° 502x275x62 | 6 | G023059 | Base stone 530x188x60 |
| 7 | G013121 | Spring | 8 | G025018 | External plate 243x422x30 |
| 9 | G025021 | External plate 243x534x30 | 10 | G025019 | External plate 243x388x30 |
| 11 | G025020 | External plate 243x568x30 | 12 | G023069 | Combustion chamber bottom 310x150x30 |
| 13 | G023063 | Front stone 629x129x40 | 14 | G023126 | External plate 300x554x30 |
| 15 | G018062 | Front stone | 16 | G025024 | Sidewall stone 557x244x62 |
| 17 | G023129 | External plate 300x442x30 | 18 | G023123 | Connecting piece for vertical smoke pipe |
| 19 | G023122 | Base stone 477x130x60 | 20 | G018033 | Wedge stone |

| | | | | | |
|----|---------|--|----|---------|-------------------|
| 21 | G018034 | Front stone top | 22 | G023049 | Wedge stone long |
| 23 | G023048 | Front stone top long | 24 | G025027 | Right front wedge |
| 25 | G025029 | Left front wedge | 26 | G025028 | Right front wedge |
| 27 | G023030 | Tensioning bracket assembly GOF 50x35 | 28 | G023040 | ISO hood |
| 29 | G023041 | Deflector plate | | | |

The outer stones are cycled with Brunner Universal 600 mortar.

The stones of the firebox are processed with FM1300 mortar.

8 MOUNTING INSTRUCTIONS FOR EAS / EOS VARIANTS

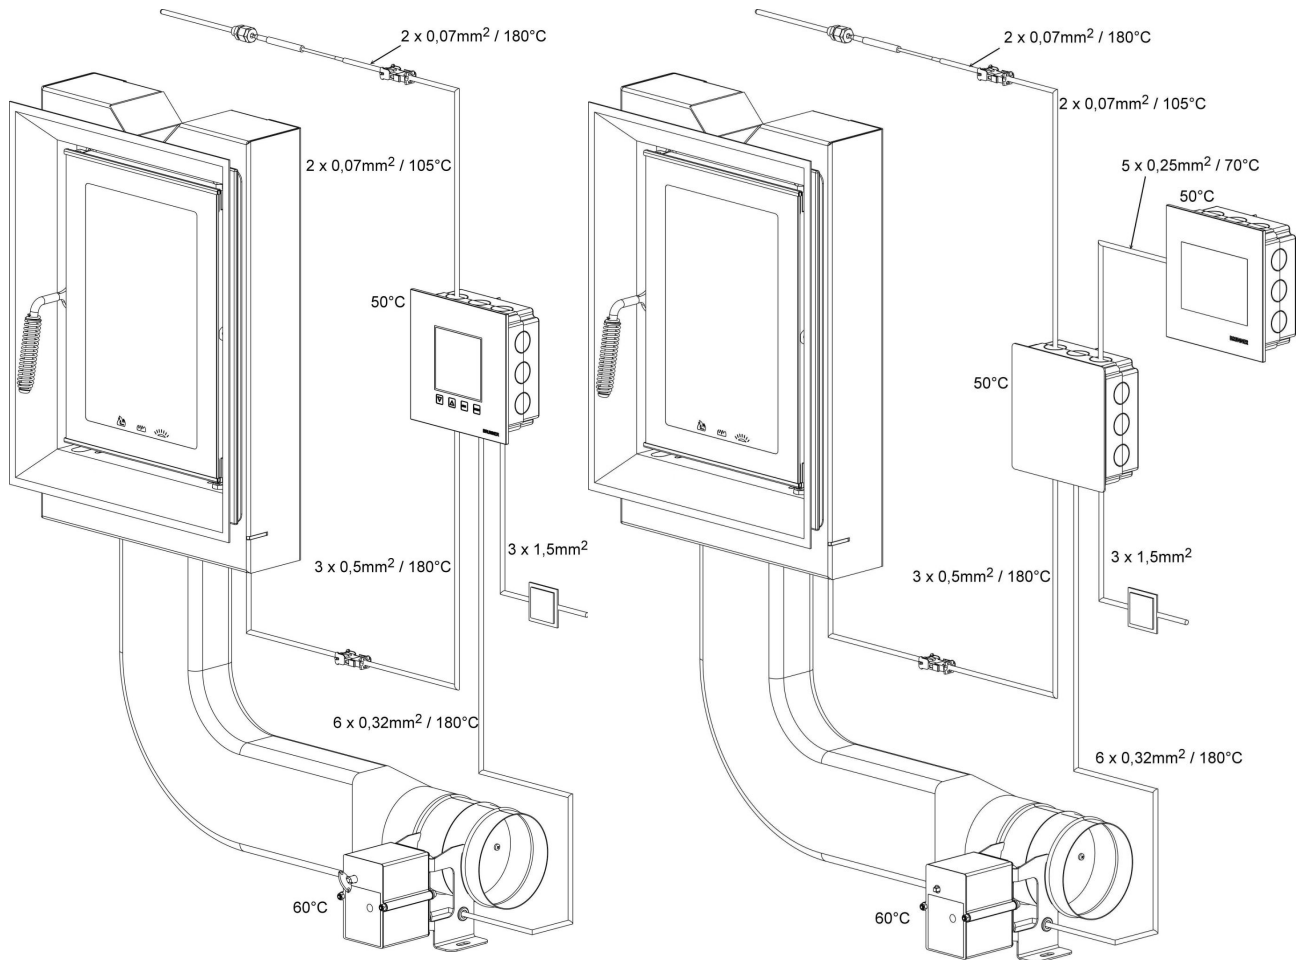

Im. 5: Schematic layout of EAS

Im. 6: Schematic layout of EOS

The indicated temperatures are maximal permissible temperatures of components!
The indicated cable dimensions are minimal dimensions!

Installation of electronic components must be prepared and performed carefully. Please pay attention to the following points:

- The flush-mounting box must be fitted in level and clean, to ensure easy, tension-free installation of electronics.
- Prevent any physical contact with electronic components - possible electrostatic discharge can damage them.
- Humidity can affect electronic components. Therefore, it is very important to ensure clean and dry installation of electronics.
- If possible, avoid installation of electronic components in exterior walls to prevent risk of corrosion at temperatures below dew point.
- The control unit must not be installed in hot parts of the tiled stove casing.

- The selected type of installation must ensure that temperatures do not exceed +40# (140°F) and the unit is not exposed to direct heat radiation.

For units with external air supply, the motorized combustion air flap assembly cannot be installed in such way that the motor is located under the flap. Condensate could penetrate the motor and destroy it.

To avoid risk of damage, all cable conduits leading from electronics into the heating chamber must enter at the bottom of the stove casing. Cable conduits cannot end in upper parts of the heating chamber due to excessive temperature.

All electronic components must be accessible after installation for revision and replacement. When selecting place of installation, keep in mind the max. permitted temperature for the component. Components cannot be installed in closed spaces; proper ventilation must ensure sufficient heat discharge.


Angle mount for thermocouple

The angle mount present on masonry heater door is for the installation of a thermocouple, which is necessary for the EAS / EOS operation. This angle mount is fitted with a 8.2 mm bore nut, which is used as drilling jig.

After the complete assembly of masonry heater - before the external cladding is made - a hole must be drilled on site with this drilling jig, through the fireclay linings and the ISO hood.

Please refer to instructions provided with the ISO hood!

The drilling jig must be removed to fit the thermocouple into the angle mount.

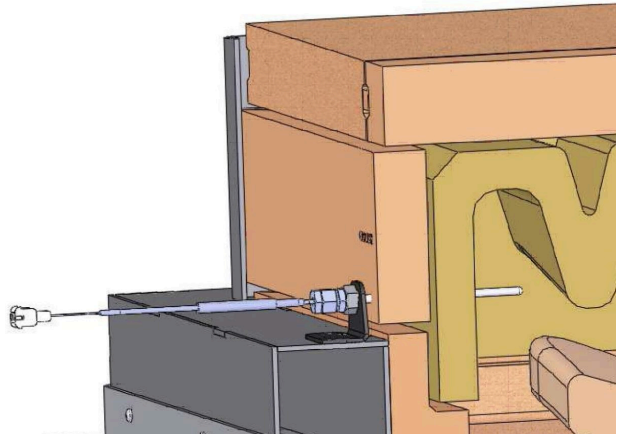

Im. 7: Thermocouple mounting

9 CHIMNEY AND SMOKE PIPE CONNECTION

Chimney and smoke pipe connection design must be in accordance with DIN 18160.1 or DIN EN 15287-1; dimensions must be calculated according to DIN EN 13384.

Connection of multiple fireplaces to the same chimney is possible, when it can be proven that the chimney is suitable, even if the design of these fireplaces is different (calculation of flow and thermal balance and approval from chimney sweep are necessary). However, it is not possible for fireplaces designed for open door use. Remember to use a separate chimney connection in this case.

If the connecting pipe between additional reheating devices (radiators, storage mass) and chimney is a steel flue gas pipe, it must be suitable for this application, it must conform to DIN EN 1856-2 standard and have a CE mark. The connecting pipe must be connected directly to the chimney.

A soot fire resistant chimney of T400 type is necessary for safe operation.

All smoke pipe connections must be sealed tightly! Remember to provide access for cleaning!

10 APPROVED INSULATION MATERIALS

Thermal insulation materials used must fulfil the following requirements according to AGI-Q 132 standard:

| | | |
|-------------------------------------|------------------|--|
| Material: | Group 12, 13 | Rock wool or slag wool |
| Delivered as: | Group 06, 07, 08 | slabs, stitched mats or shells |
| Thermal conductivity: | Group 01 - 21 | |
| Upper temperature limit: | Group 70 - 76 | equivalent to 700 °C - 760 °C |
| Nominal density kg/m ³ : | Group 08 - 18 | equivalent to 80 kg/m ³ - 180 kg/m ³ |

Thermal insulation materials used must be at least equivalent to class A1 building materials according to DIN 4102, Part 1. The temperature limit for use must exceed 700°C and the density must be greater than 80 kg/m³ for these materials. The insulation material rating (heat index) must be known. In addition, insulation materials inside convection space must be abrasion-resistant and covered with non-reflecting material. Instead of brick lining and insulation materials according to AGI-Q 132, any other insulation materials approved for the given purpose by DIBt (Deutsches Institut für Bautechnik) might be used. For necessary insulation thicknesses please refer to the manufacturer's specifications.


Insulation material rating for mineral wool according to AGI Worksheet Q 132:

| Insulation materials | | Delivered as | | Thermal conductivity | | Upper temperature limit | | Nominal density | |
|----------------------|------------|--------------|----------------|----------------------|-------------------------|-------------------------|-----|-----------------|-------------------|
| Gr. | Type | Gr. | Form | Gr. | Delivered as | Gr. | °C | Gr. | kg/m ³ |
| 11 | Glass wool | 04 | Felts | 01 | Mats, stitched, Limit 1 | 10 | 100 | 02 | 20 |
| 12 | Rock wool | 05 | Lamella mats | | Mats, stitched, Limit 2 | 12 | 120 | 03 | 30 |
| 13 | Slag wool | 06 | Mats, stitched | 02 | Shells, Limit 1 | 14 | 140 | 04 | 40 |
| | | | Slabs | 10 | Shells, Limit 2 | 16 | 160 | 05 | 50 |
| | | 07 | Shells | 11 | Slabs, Limit 1 | . | . | 06 | 60 |
| | | 08 | Segments | 20 | Slabs, Limit 2 | . | . | . | . |
| | | 09 | Braids | 21 | *) | 72 | 720 | . | . |
| | | 10 | Panels | 99 | | 74 | 740 | 18 | 180 |
| | | 11 | | | | 76 | 760 | 99 | **) |


*) 99 is valid only for delivery forms in column 2, which have no declared limits.

***) 99 is valid only for shells.

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

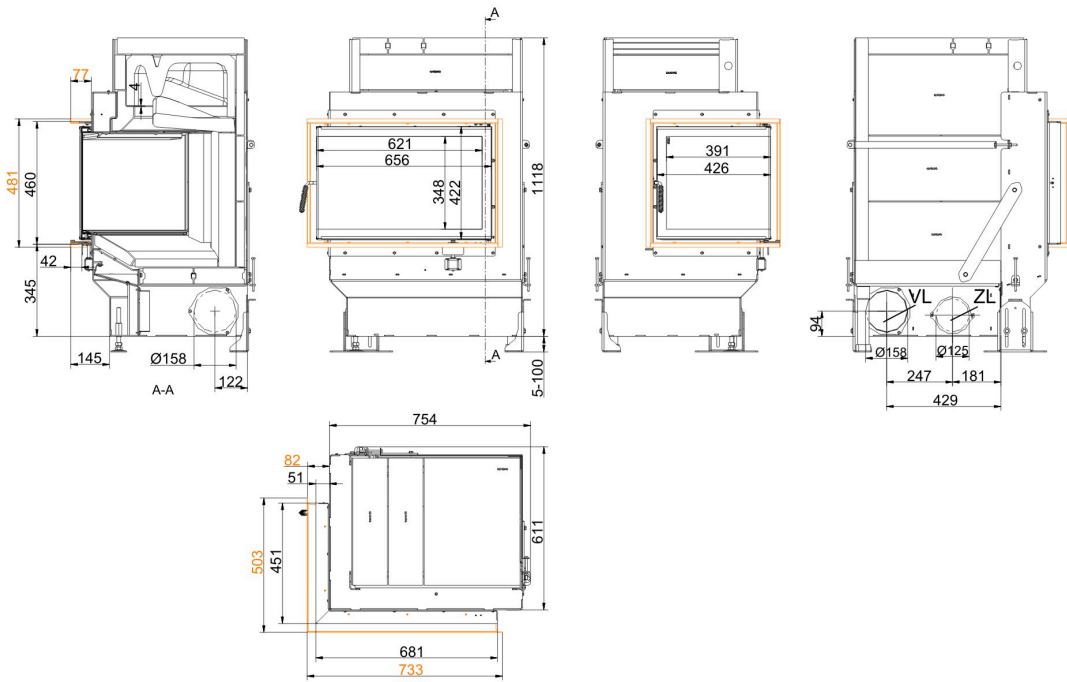


... side-opening door left with door frame

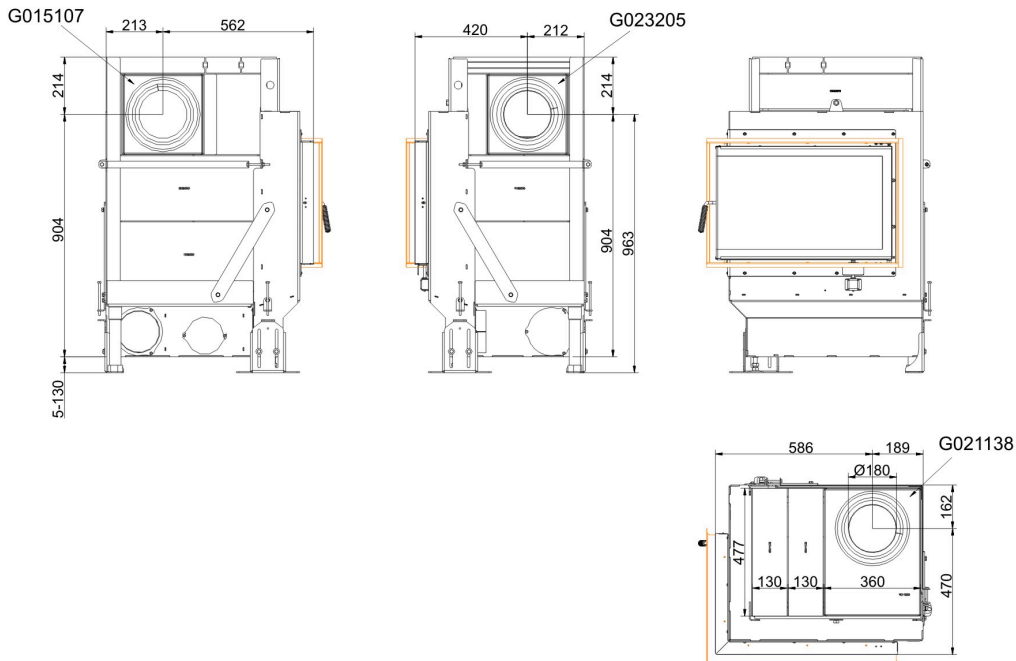


... side-opening door left with ceramic duct connecting pieces

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

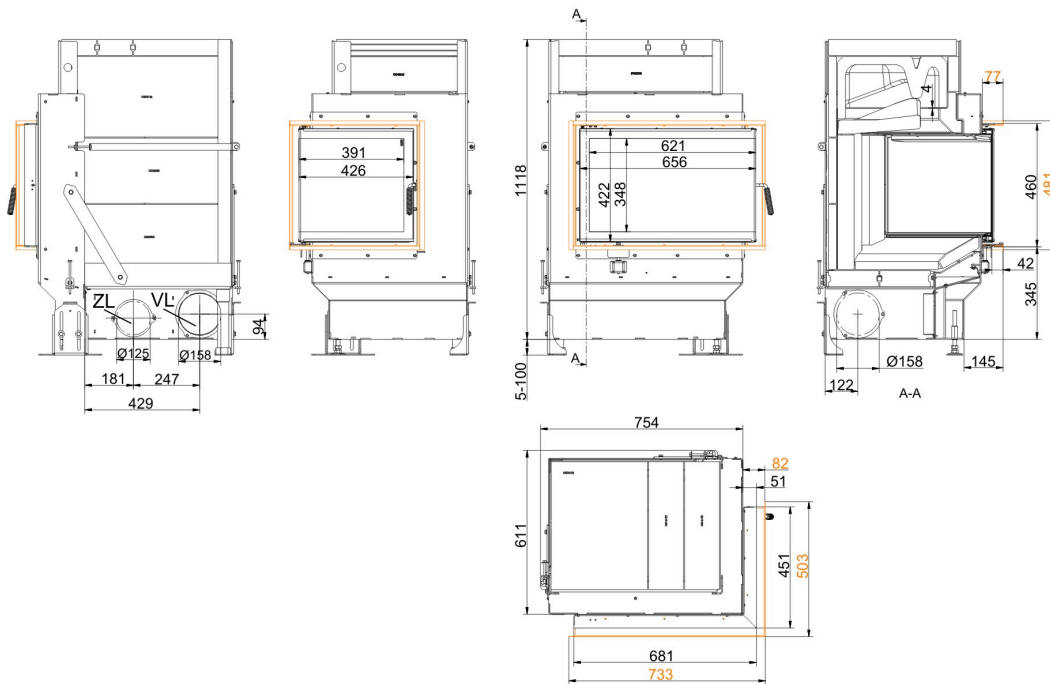


... side-opening door right with door frame

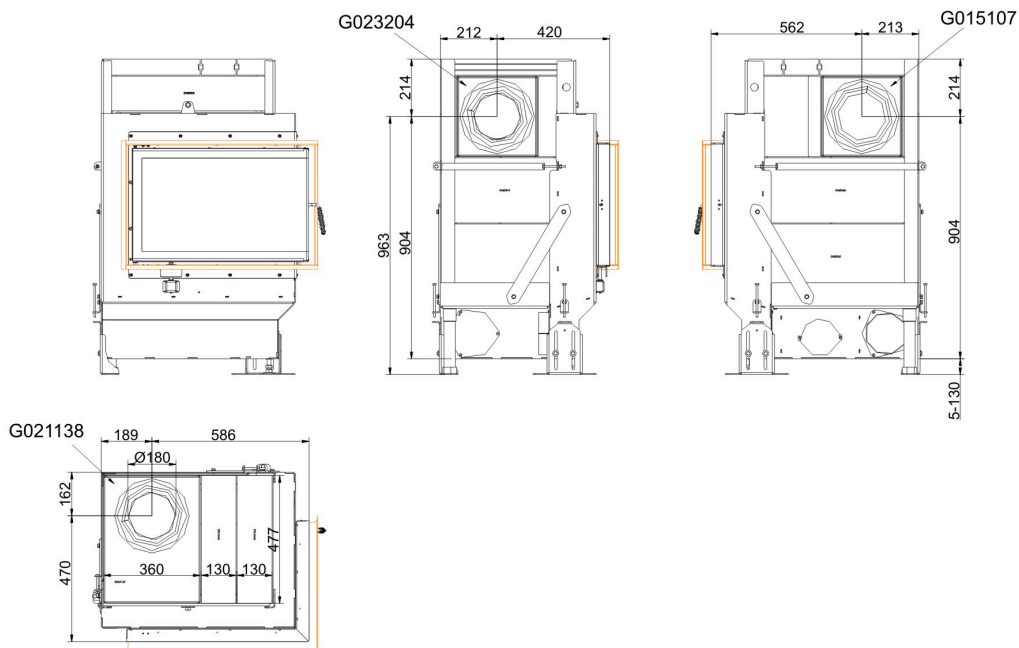


... side-opening door right with ceramic duct connecting pieces

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

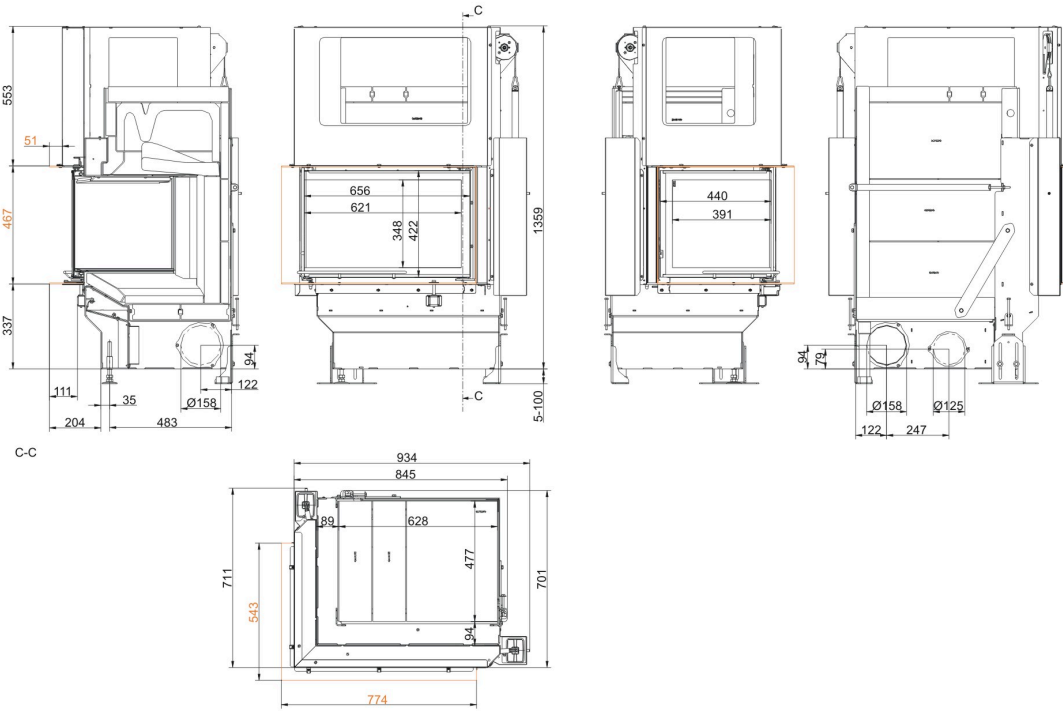


... lifting door left with 50 mm mounting frame

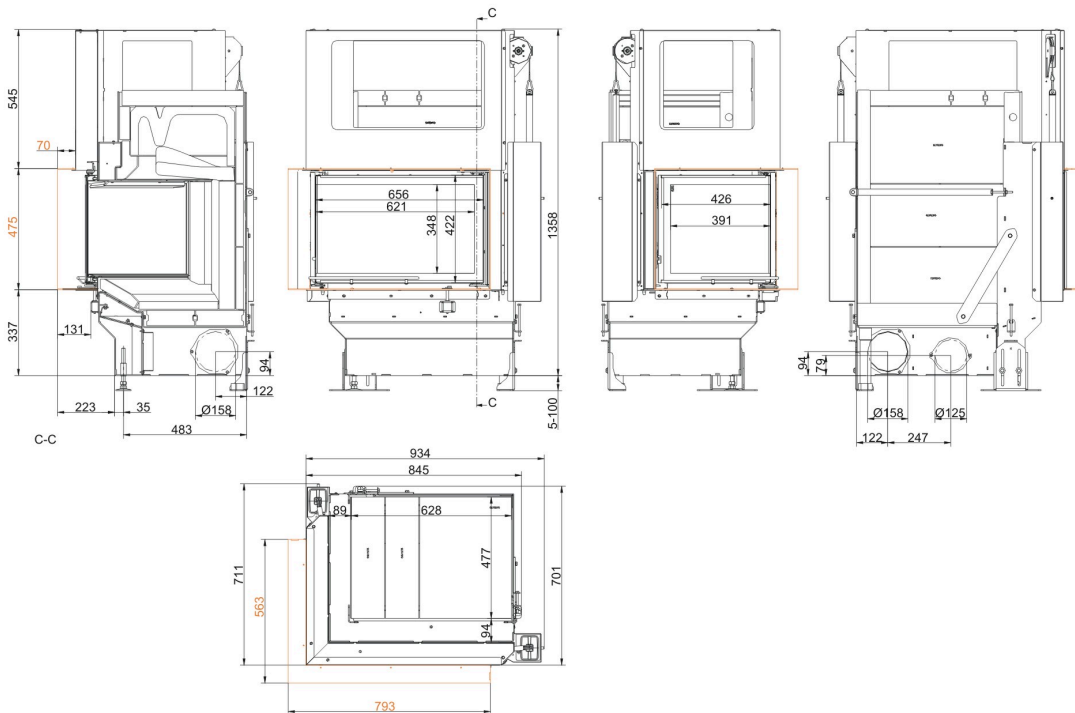


... lifting door left with 70 mm mounting frame

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

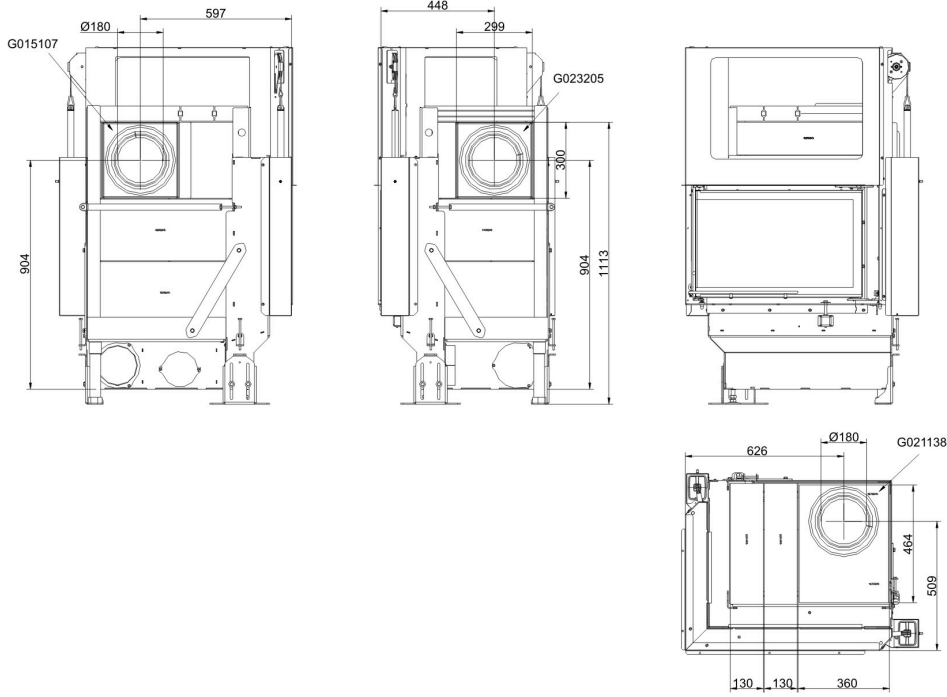


... lifting door left with ceramic duct connecting pieces

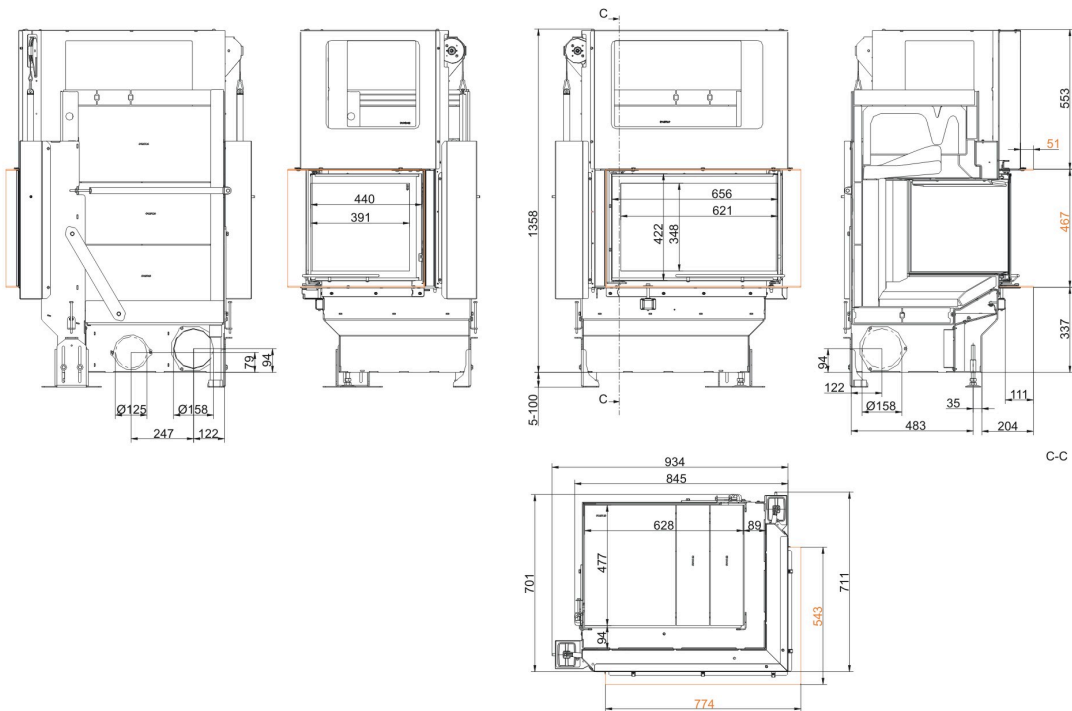


... lifting door right with 50 mm mounting frame

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

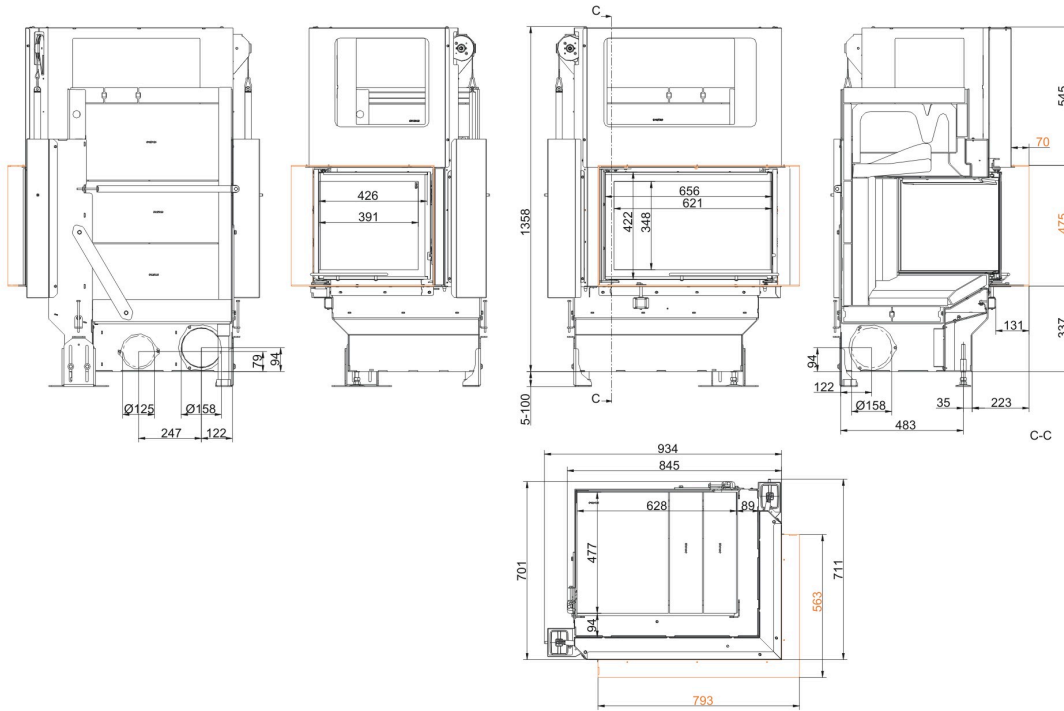


... lifting door right with 70 mm mounting frame

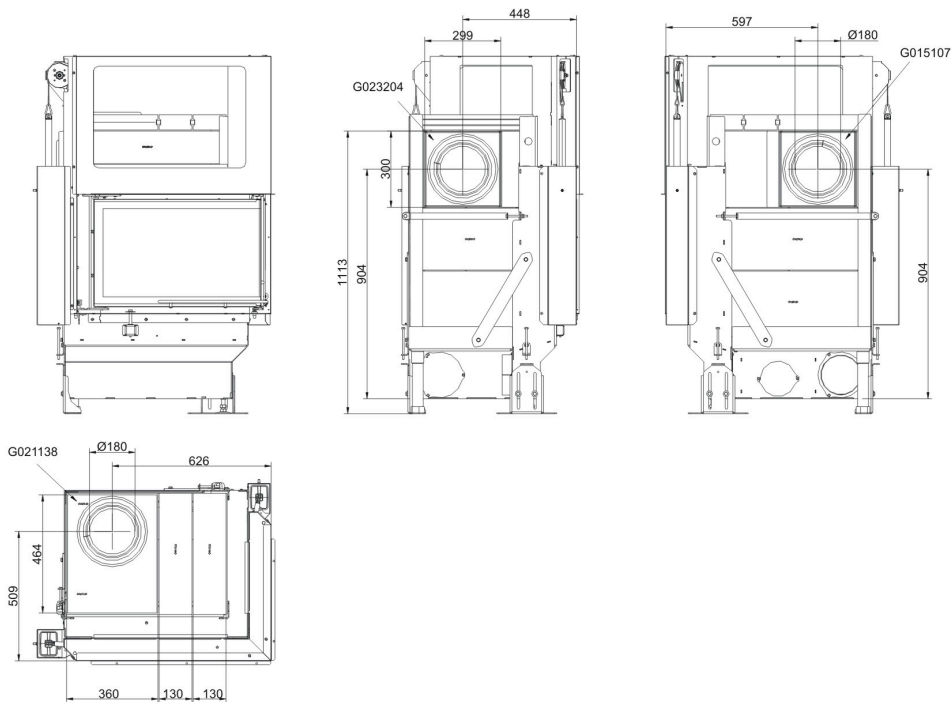

... lifting door right with ceramic duct connecting pieces

Dimension sheets - GOT-Eck 45/67/44-ZL with GOF 50x35

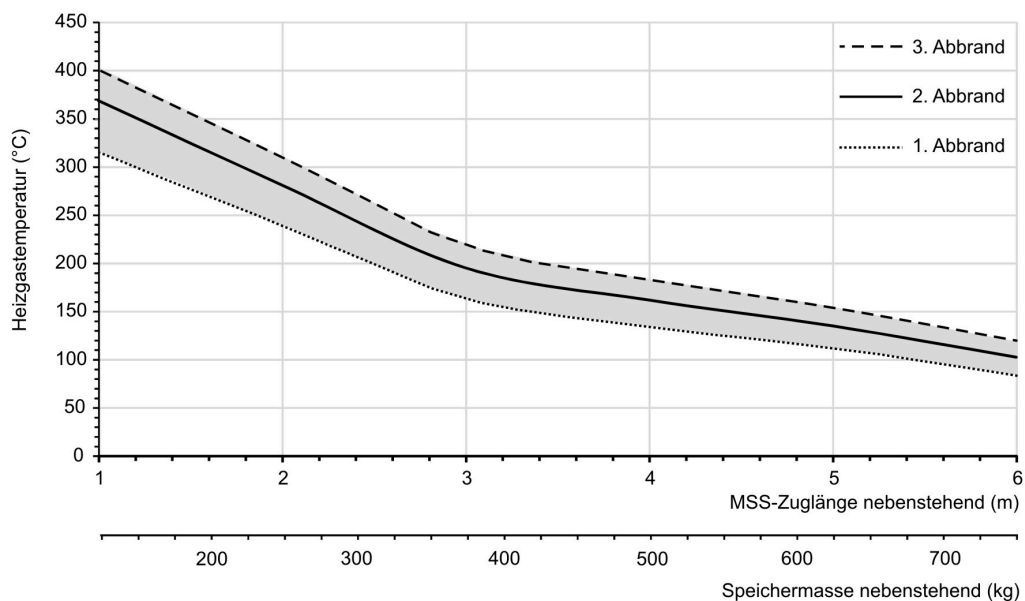

Design characteristics for adjacent storage mass

We suggest for CAD planning Palette CAD. Permanent updated drawings: www.brunner.de

Frames/ flue gas outlet connection/ combustion air supply connection/ front variants/ support bearing are marked in color.

Planning and installation - GOT-Eck 45/67/44-ZL with GOF 50x35


| Tested according to | | EN 15250 | EN 15250 |
|---|-------------------|--|----------------------|
| Values measured at | | top-mount accumulator | adjacent accumulator |
| ceramic accumulator ¹⁾ | kg | 300 | 400 |
| MSS | m / kg | 2,3; 280 | 3,2; 405 |
| Suitable for all construction types according to rules | | OK | OK |
| Data for functional demonstration | | | |
| Fire wood volume | kg/h | 7.9 | 7.9 |
| Combustion performance | kW | 31.6 | 31.6 |
| Flue gas mass flow | g/s | 24.4 | 24.4 |
| Outlet temperature (before reheating surface) | °C | 530 | 530 |
| Flue gas temperature after: | | | |
| ceramic accumulator ¹⁾ | °C | 180 | 180 |
| accumulation stones (MSS) ¹⁾ | °C | 210 | 195 |
| Necessary supply pressure ²⁾ | Pa | 12 | 12 |
| Load of wood 1st/2nd combustion cycle | kg | 8 + 5 | 8 + 5 |
| Combustion air consumption | m ³ /h | 71 | 71 |
| Efficiency | % | 86 | - |
| Combustion air connection Ø | mm | 160 | 160 |
| Heating gas temperature (before the hood/dome variant) | | | |
| insert flue outlet nozzle | °C | 530 | 530 |
| Heat distribution | | | |
| Insert / reheating surface | % | 15 / 50 | 15 / 50 |
| Glass pane (single / double) | % | 35 / - | 35 / - |
| Weight | | | |
| Fireplace / combustion chamber | kg | 415 / - / - | |
| Meets requirement/limit values for: | | | |
| Germany/ Austria / Switzerland / Norway | | 1.BImSchV (Stufe 2) / 15a BVG (2015) / - / - | |

1) Approximate value. Determination according to design characteristics for adjacent storage mass or proof of function provided by calculation

2) For GOF without storage mass; 1m MSS = 0,4 Pa pressure drop

Product data sheet according to (EU) 2015/1186:

| | |
|---|--------------------------------|
| Supplier's name or trademark | Ulrich Brunner GmbH |
| Model identifier: | GOT 45/67/44 Eck mit GOF 50x35 |
| Energy efficiency class: | A+ |
| Direct heat output: | 2,2 kW |
| Indirect heat output: | N.A. kW |
| Energy efficiency index: | 109 |
| Fuel energy efficiency (at nominal heat output): | 83,0 % |
| Fuel energy efficiency (at minimum load): | N.A. % |
| Special precautions: see supplied product documentation | |

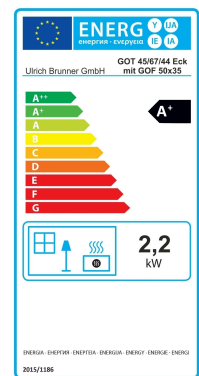

Ulrich Brunner GmbH
 Zellhuber Ring 17-18
 D-84307 Eggenfelden
 Tel.: +49 (0) 8721/771-0 / Fax: +49 (0) 8721/771-100
 Email: info@brunner.de

Technical and assortment changes as well as errors and misprints reserved.
 Reprinting and reproduction, even in part, only with the express permission of the publisher.

Art.Nr.: 200332