

Installation Guide

BSG 01

©2022

BRUNNER[®]
made in germany.

CONTENTS

1	Basic informations.....	2
2	Basic informations.....	3
3	Components of BSG 01 with MSS on top.....	5
4	Components of BSG 01 with adjacent MSS.....	7
5	Tolerances of thermal concrete parts.....	9
6	Sequence of assembly with MSS on top.....	11
7	Sequence of assembly with adjacent MSS.....	15
8	Assembly.....	20
9	Drawings and technical data.....	

1 BASIC INFORMATIONS



All instructions delivered with products must be observed. We do not accept any warranty claim or liability for damage resulting from failure to observe these installation instructions!
Improper installation can cause injury and material damage!

The installation may only be carried out by a registered specialist.

Fireplaces equipped with a water boiler must be pressure-tested after hydraulic connection to the heating system. Masonry work may follow only after this pressure test. Ulrich Brunner GmbH does not cover any costs incurred by necessary dismantling of masonry for rework at water boiler installation or replacement of the boiler.

The floor space of the room must have a suitable structure and sufficient dimensions to ensure proper functioning of the fireplace.

Please note that other installation and assembly instructions are included in other packaging units!

Dimensioning of downstream heat accumulator must be according to valid stove-setting rules.

During installation of the fireplace, all dimensions and minimal clearances of the fireplace casing must be held as specified by the manufacturer.

Fireplaces that meet the requirements of DIN EN 13240 or DIN EN 13229 and that can only be operated as intended with closed combustion chamber door or that have a self-closing firebox door are suitable for multiple occupancy.

All binding national or EU standards and local regulations for the installation of fireplaces must be observed.

All valid stove fitting rules and regulations of local construction law must be observed and followed.

Please follow the relevant regulations of your country.

When these instructions are followed and all works are done properly, this will ensure a safe, energy-saving and environmentally friendly operation of the stove. Pictures shown are not to be considered as complete representations of any kind.

Subject to technical and assortment changes.

Please notify your supplier of any damage which might have occurred during transport.

Please keep these instructions.

2 BASIC INFORMATIONS

Fireplace inserts

The cladding elements of BSG are specially adapted for the respective kits of the masonry heaters of Ulrich Brunner GmbH.

Brunner Masonry stove kit systems	suitable doors
BSG 01	GOT 51-67 side opening door+ GOF 66x42 with frame
BSG 02	GOT 45-67-44 side opening door L/R + GOF 50x35 L/R with frame

The BSO stove fitting kits are designed for particular stove inserts manufactured by Ulrich Brunner GmbH.

BSO	Stove insert to be used	Recomm. load every 2h^{*)}
BSO 01	HKD 2.2 short DR (with door frame R330)	2.5 kg
BSO 02	HKD 2.2 DF and HKD 2.2 D/DF (with mounting frame)	3 kg
BSO 03	HKD 2.2 DF and HKD 2.2 D/DF (with mounting frame)	4 kg

^{*)} When the above loads are exceeded, or if the recommended load is burned in shorter times, cracks on external walls of the stove are possible. Please inform the user about this.

The components of BSO kits fulfil the requirements of exposed concrete class SB2.

Floor

On flammable floors, the fireplace must be placed on a slab made of non-flammable material. This slab must be at least 500 mm long in front and 300 mm wide on both sides of the fireplace.

The base plate must be carefully set to level; please pay attention, that it rests evenly on the entire surface.

It is recommended to use the wall as reference and set the base plate at 90 degrees. The completely assembled accumulation stove cannot be moved or turned afterwards.

Adhesive mortar as filler

Adhesive mortar is used to fill uneven spots or holes on concrete elements' surface.

Mix the adhesive mortar with water (it should remind the consistence of toothpaste). Before you start, wet the concrete surface with a wet sponge. This will help to remove dust and provides for better adhesion.

Acrylic joint seal

Used pointwise for setting of components and to seal any joints < 8 mm (0.31 in). Major outbreaks, gaps or like are touched up with adhesive mortar.

Painting

24 hours after assembly you can paint the stove external casing. Plastered walls must be previously sanded with fine abrasive paper.

Hairline cracks and small defects

Small cracks can appear at the connection points between the components of the cladding, at the connection between the house wall and the cladding and in the event of heavy stress on the component surface. This is normal and no reason for complaint. You can repair small cracks with the optionally available revision set (item no.: 900300). Scrape out the joint with a joint scraper and suck out with a vacuum cleaner. Inject the acrylic joint compound and distribute with a soap wetted finger.

After 24 hours the joint can be painted over.

S**Bigger defects**

Transportation damage must be reported immediately to the shipping company. Replacement parts can be ordered from Ulrich Brunner GmbH.

In the case of bigger defects which cannot be repaired with the revision set (item no.: 900300), it is possible to request exchange at Ulrich Brunner GmbH, based on your warranty.

Replacement part requests:

When ordering replacement parts it is necessary to mark the damaged parts on the attached packing list and make a picture of the damage. Then, the printed picture and packing list should be sent back to Ulrich Brunner GmbH. The replacement part will be sent as soon as possible.

Concrete look exterior

Stove casings with concrete look, despite the best practices used during manufacturing and shipping, can show slight irregularities like air inclusions, small cracks or unclean edges. This corresponds entirely with the concrete look design and is not a reason for a claim. Cracked or significantly damaged elements will be replaced as part of your products' warranty.

If any additional components like electronics (EOS) or similar are installed inside the stove casing, the max. allowed ambient temperature must be respected. Electronics must be installed in such a way to provide for rear ventilation.

All safety distances are minimal required distances.

Subject to errors and changes!




Please follow the separate installation instructions for the stove insert.

3 COMPONENTS OF BSG 01 WITH MSS ON TOP


Components of the concrete cladding

Pos	Article	Designation
2	BSG1000-001	Base plate Serie 01
3	BSG1000-003	Base ring 2 Serie 01
4	BSG1000-002	Base ring 1 Serie 01
5	BSK8000-005	Upper ring 1 BSK 08
6	BSK8000-007	Upper ring 3 BSK 08
7	BSG1000-004	Lid Serie 01
8	BSK8000-010	Side panel left/right for BSK 08
9	BSK8000-012	Rear side panel BSK 08
10	BSO3000-019	Inspection lid BSO 03
11	BSG1000-005	handle of removal lid
12	BSK8000-006	Top ring height 280 mm

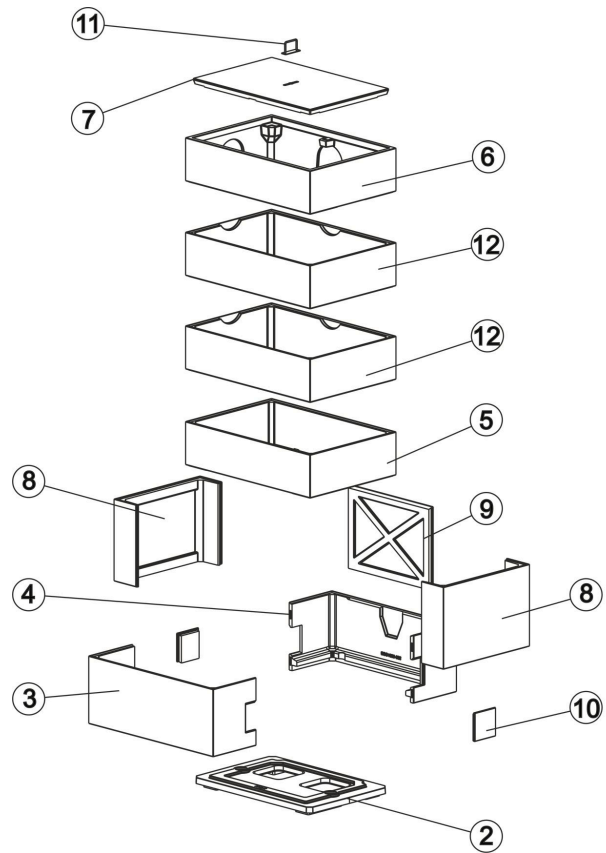

Im. 1: Components of the concrete cladding

Components of MSS

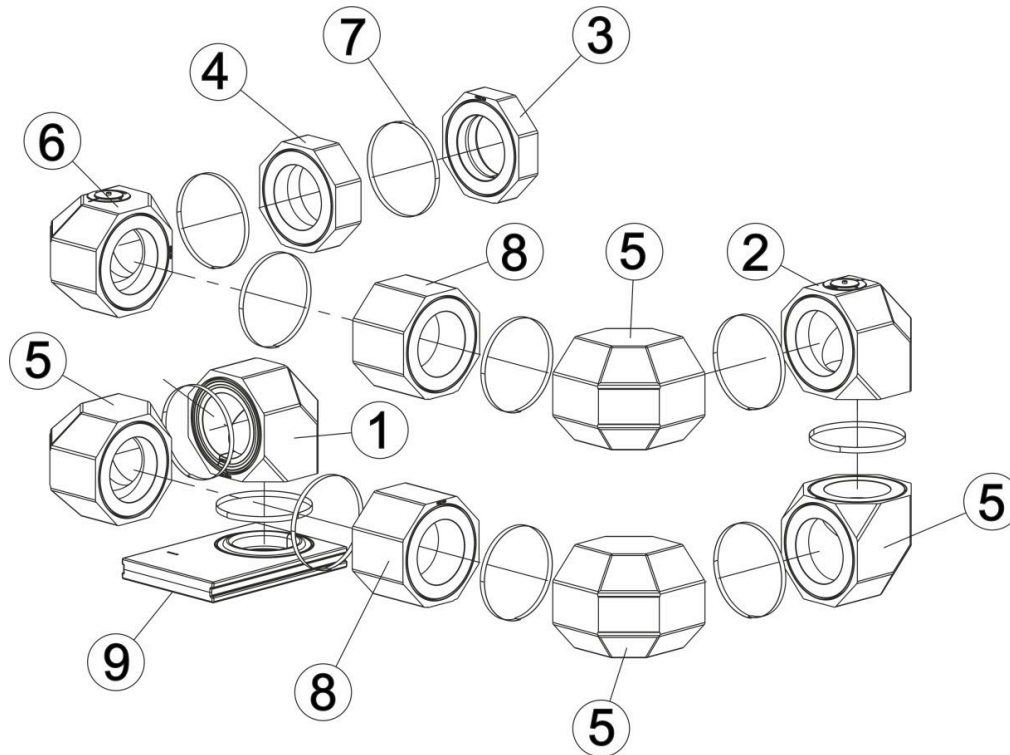


Im. 2: Components of MSS

Pos	Article	Designation	Pos	Article	Designation
1	R013061	MSS90° bend with double-walled inner pipe	2	R013019	MSS Bogen 90° with cleaning cover on top
3	R013067	MSS burn out stone d180 with seal	4	R013002	MSS module storage stone 10cm
5	R013005	MSS 90° bend	6	R013018	MSS Bogen 90° with cleaning cover left
7	R013020	MSS steel band ring	8	R013001	MSS module storage stone 20 cm
9	G013196	connection stone GOF/MSS AD flat 534 360x534x60			

4 COMPONENTS OF BSG 01 WITH ADJACENT MSS


Components of the concrete cladding

Pos	Article	Designation
1	BSG1000-001	Base plate Serie 01
2	BSG1000-003	Base ring 2 Serie 01
3	BSG1000-002	Base ring 1 Serie 01
4	BSK8000-005	Upper ring 1 BSK 08
5	BSK8000-007	Upper ring 3 BSK 08
6	BSG1000-004	Lid Serie 01
7	BSK8000-010	Side panel left/right for BSK 08
8	BSK8000-012	Rear side panel BSK 08
9	BSO3000-019	Inspection lid BSO 03
10	BSG1000-005	handle of removal lid

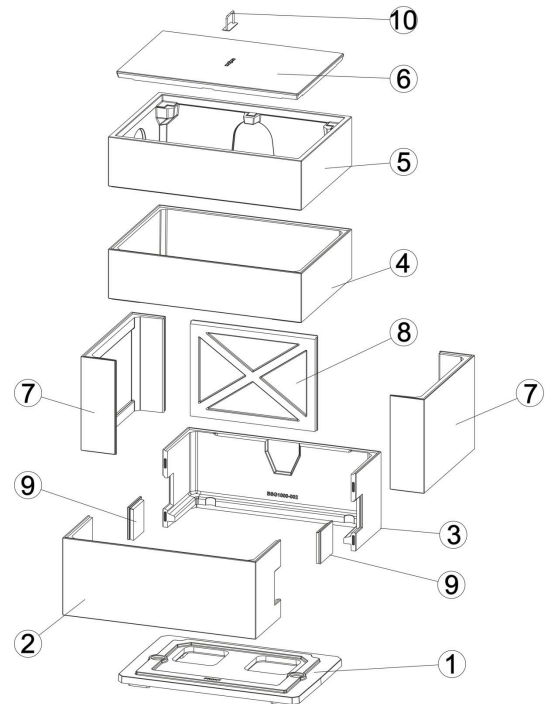


Im. 3: Components of the concrete cladding GOF

Pos	Article	Designation
1	BSO3000-019	Inspection lid BSO 03
2	BSG1000-009	Base plate Serie 01
3	BSG1000-010	Base ring 1 Serie 01
4	BSG1000-011	Upper ring 02 Serie 01
5	BSG1000-013	Upper ring 4 Serie 01
6	BSG1000-012	Upper ring 3 Serie 01
7	BSG1000-014	Lid Serie 01
8	BSG1000-005	Lid removal handle

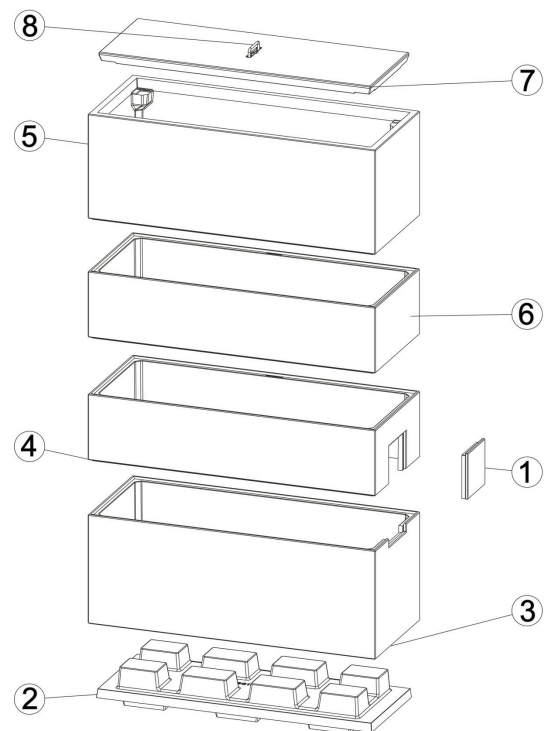

Im. 4: Components of the concrete cladding MSS

Components of MSS

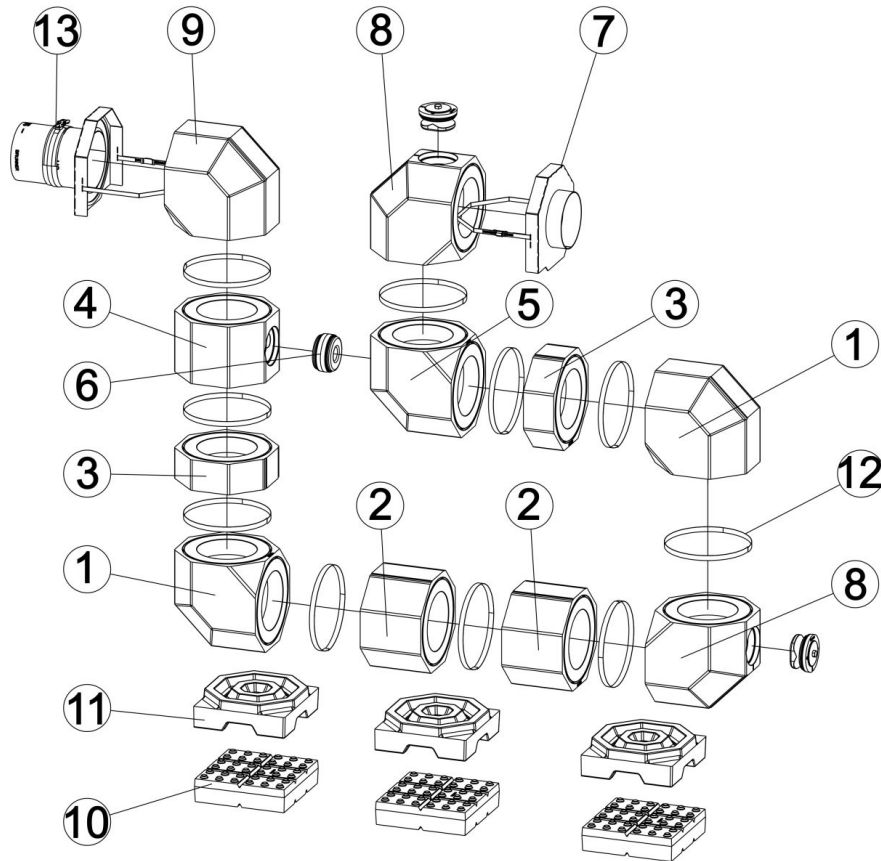

Im. 5: Bauteile des MSS


Pos	Article	Designation	Pos	Article	Designation
1	R013005	MSS 90° bend	2	R013001	MSS module storage stone 20cm
3	R013002	MSS module storage stone 10cm	4	R013003	MSS module storage stone 20cm with opening
5	R013007	MSS 90° bend with opening at the top	6	R013074	MSS bypass 40 with seal
7	R013160	MSS adapter burn out stone with pipe clamp	8	R013019	MSS 90° bend with cleaning cover on top
9	R013061	MSS 90° bend with double-walled inner pipe	10	R013123	MSS base stone 75 30x30cm
11	R013108	MSSI insulating stone 30x30cm	12	R013020	steel band ring
13	R013158	MSS adapter burn in stone HS with pipe clamp and seal			

5 TOLERANCES OF THERMAL CONCRETE PARTS

The following tolerances are valid for all parts of our system fireplace/stove casings. Except where otherwise indicated, all data refer to the nominal dimensions, as found in dimensional drawings.


Length Tolerances

For each part, the indicated tolerances apply.

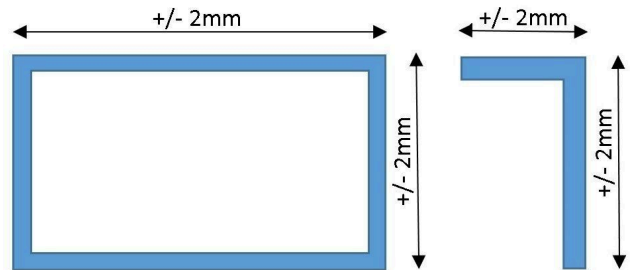

Height Tolerances


For each part, the indicated tolerances apply.

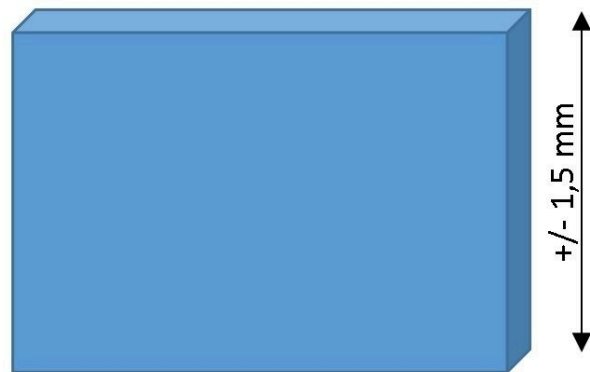


Tolerances of Flatness

For parts with nominal dimensions up to 950 mm, a tolerance of +/- 2.5 mm applies. Above this dimension, a tolerance of +/- 3 mm applies.

These tolerances apply also for the base support and top cover parts. The leveling board (R) must be placed in parallel to the basic body!

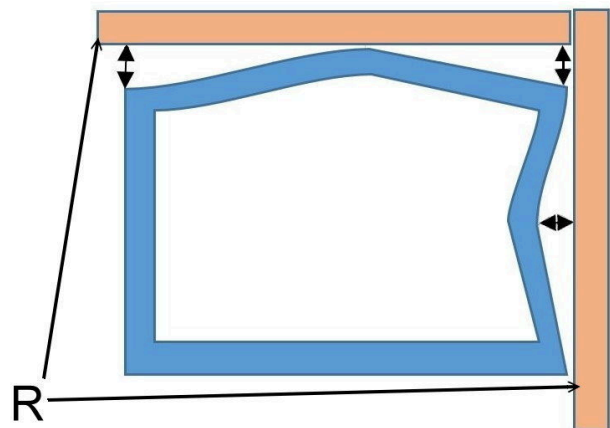

Im. 6: Leveling boards placed correctly

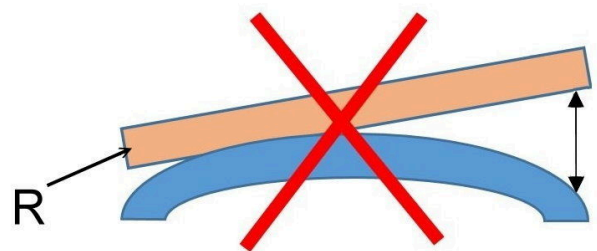


Im. 7: Incorrectly placed leveling board

Tolerances of Angle


In order to determine the deviations of angles, place the square measuring tool along the long edge!

For nominal dimensions up to 600 mm, a tolerance of 0.28%, i.e. 1.7 mm applies. For nominal dimensions up to 900 mm, a tolerance of 0.30%, i.e. 2.4 mm applies.

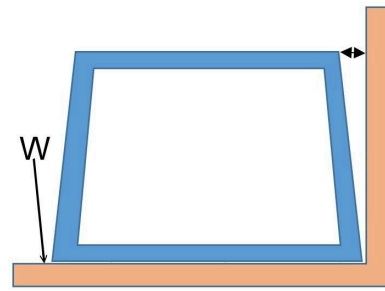


Roundness

Up to a nominal diameter of 650 mm, a tolerance of 0.25%, i.e. 1.62 mm applies. For diameters above this value, a tolerance of 0.28%, i.e. 2.38 mm applies.

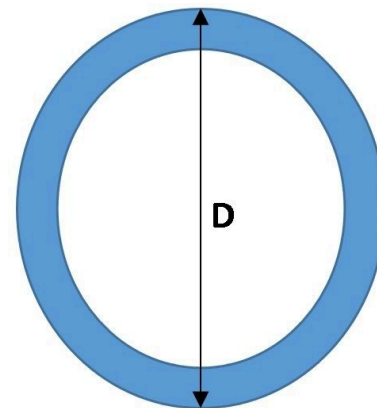


Wall thicknesses

For wall thicknesses, a tolerance of 3.5% applies.

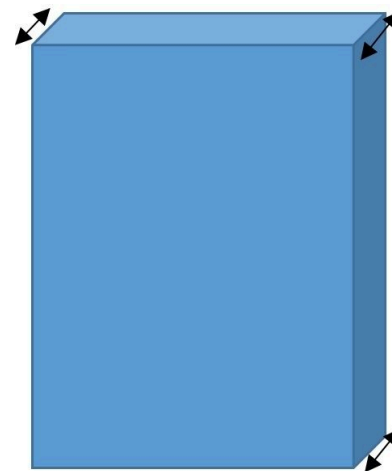


The overall appearance with color shade differences being present or not can be assessed in general only after a longer period of time (several weeks in some cases). The uniformity of color should be assessed from a typical viewing distance.


6 SEQUENCE OF ASSAMBLY WITH MSS ON TOP

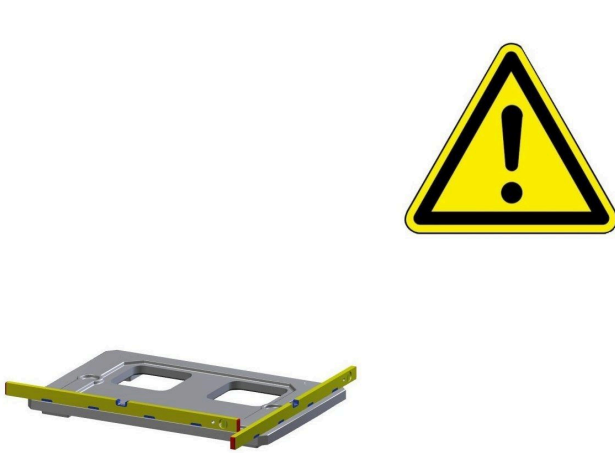


Im. 8: align the bottom plate

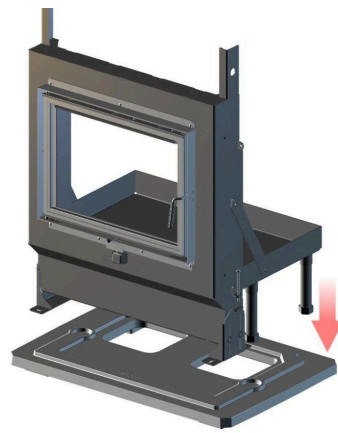


Im. 9: set up the door with the support frame

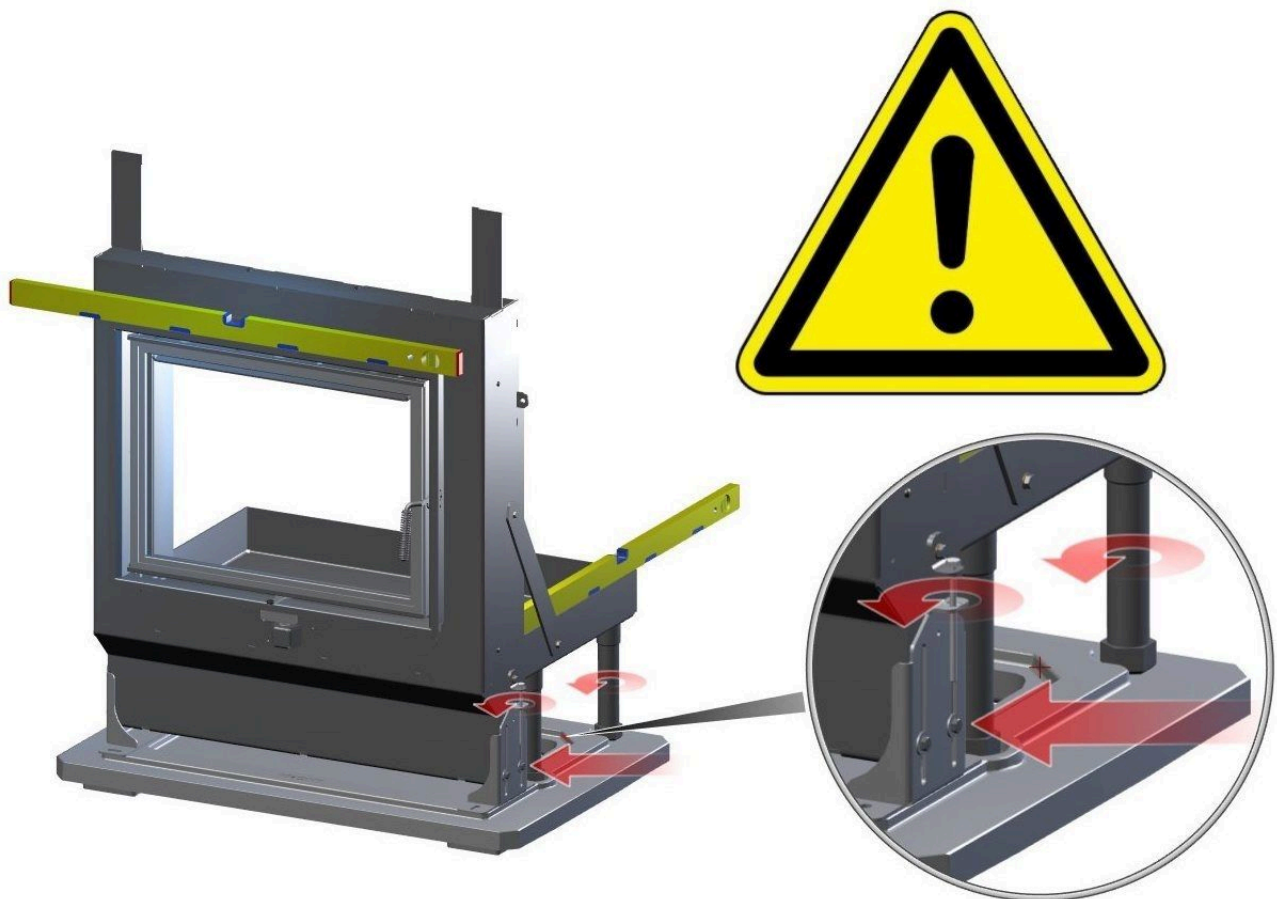

Im. 10: fix up the door with the support frame

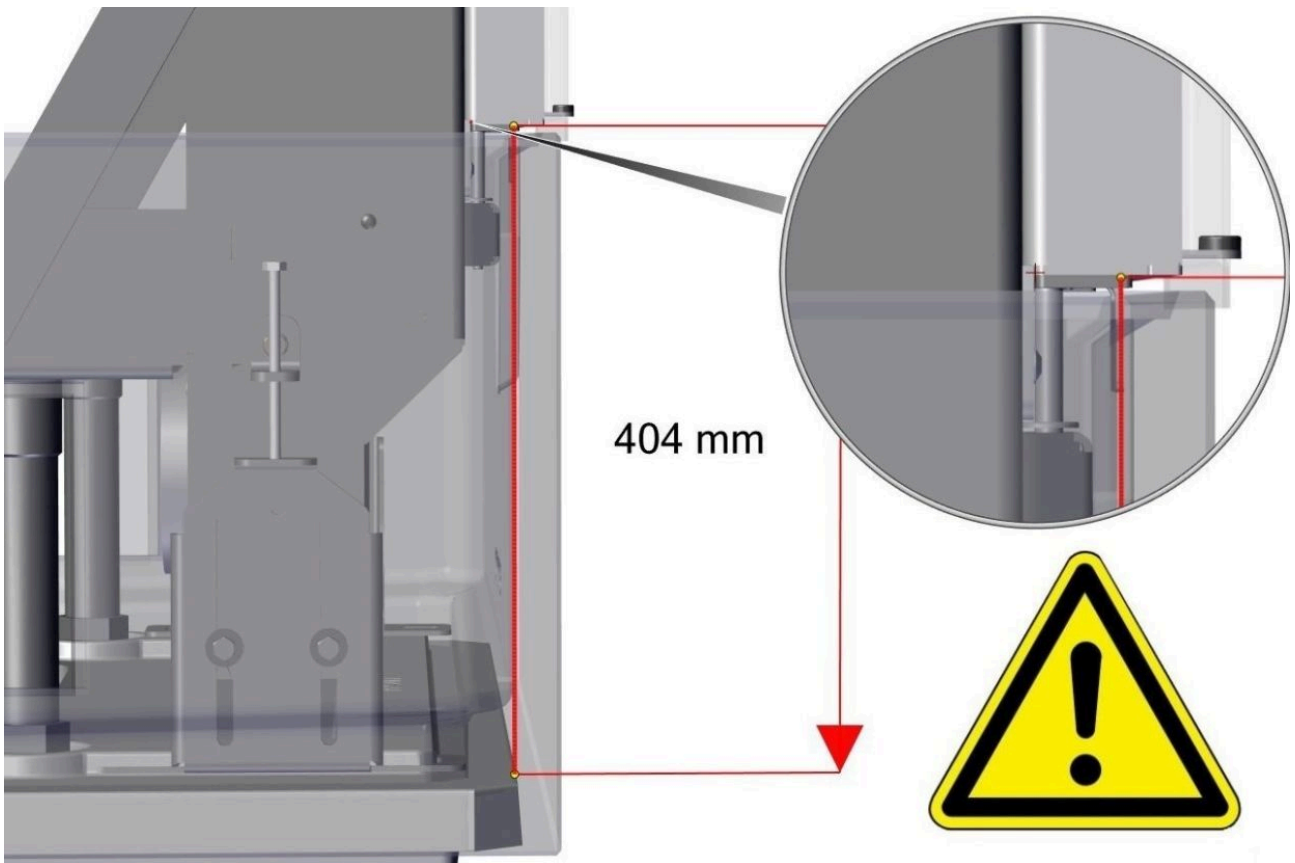


Im. 11: adjust height

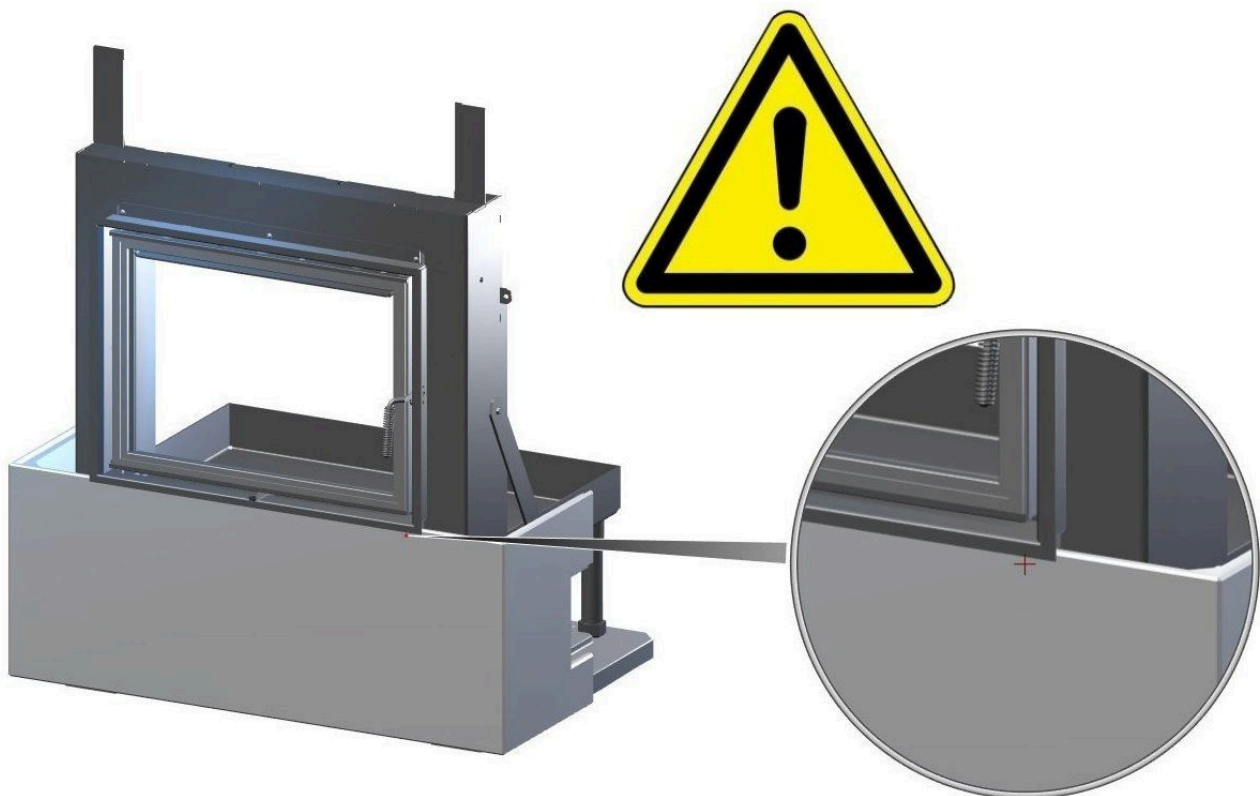


Im. 12: set up the base ring 2




Im. 13: cut out burnout in ISO hood

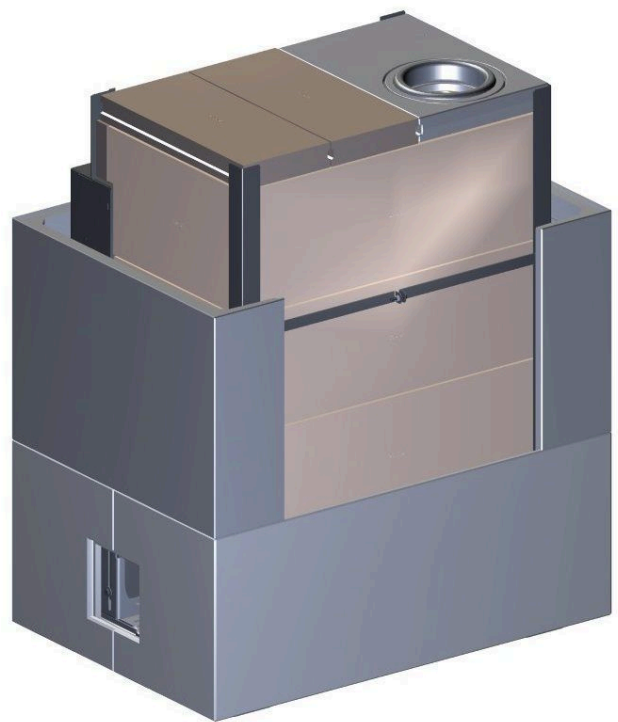

Im. 14: set base ring 1 and side elements

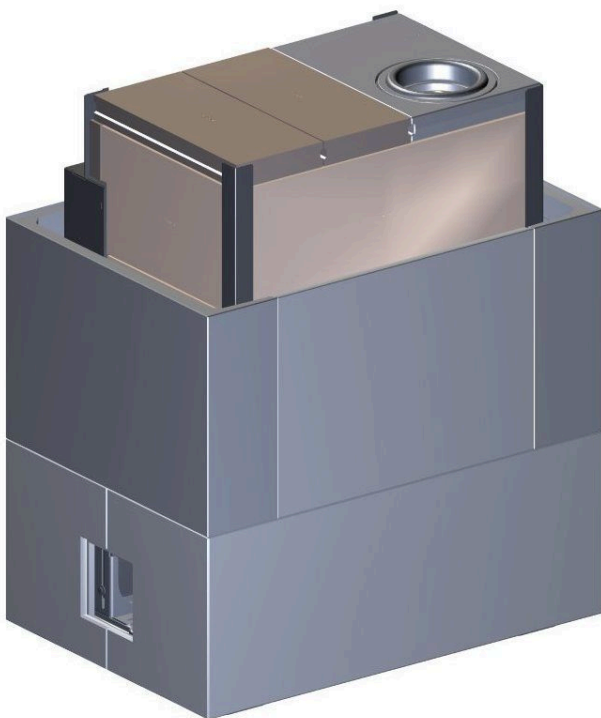


Im. 15: set up the rear wall

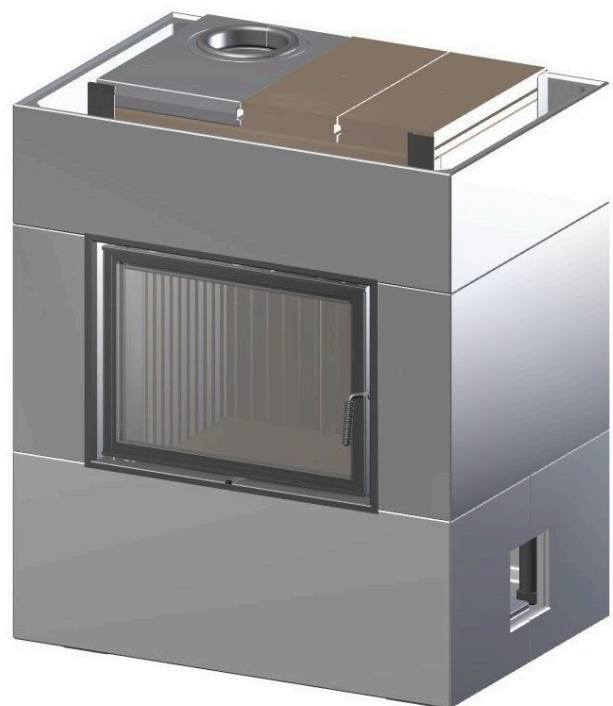


Im. 16: set up the second ring


When assembling the MSS components, it is essential to follow the MSS assembly instructions! The installation with adhesive and steel rings is not described in detail here.

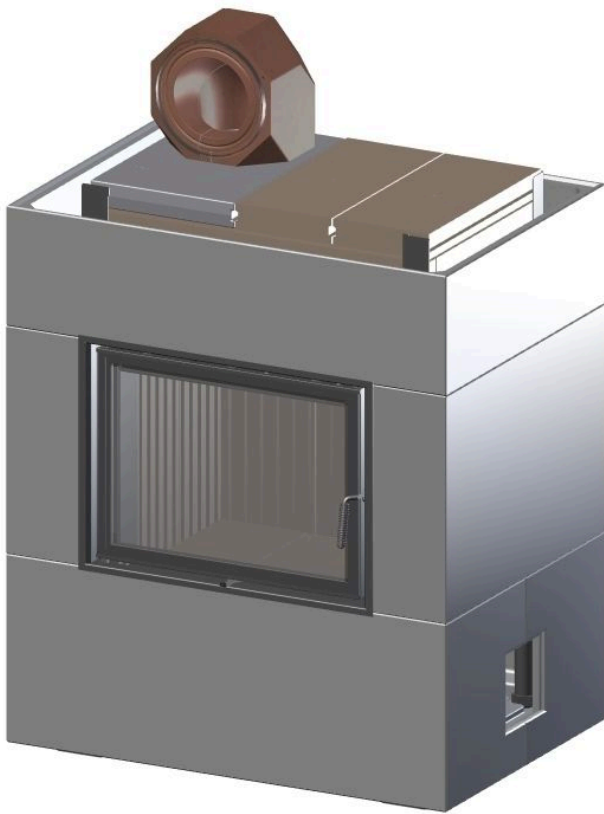


Im. 17: set first MSS bow

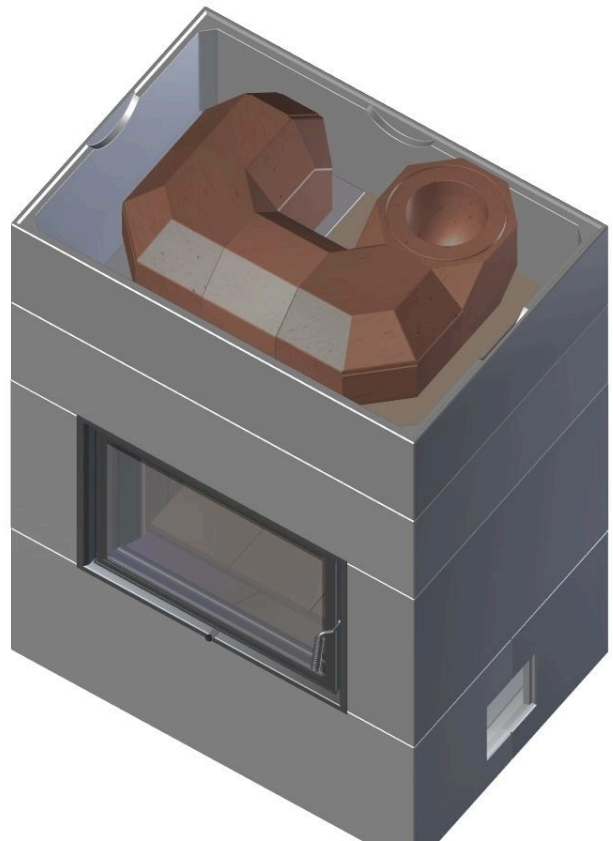


Im. 18: first level MSS is set

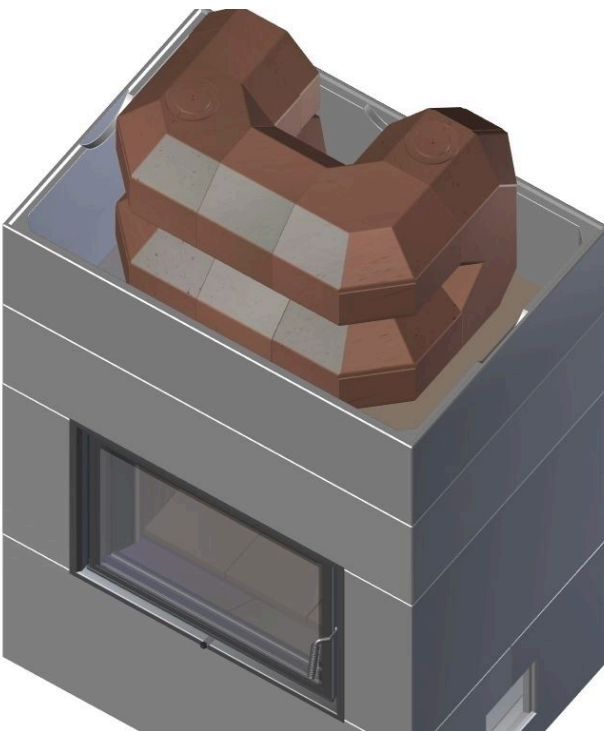


Im. 19: second level MSS is set

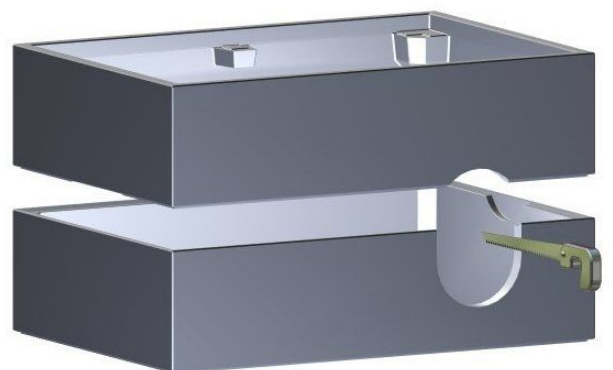

Im. 20: cut out burnout

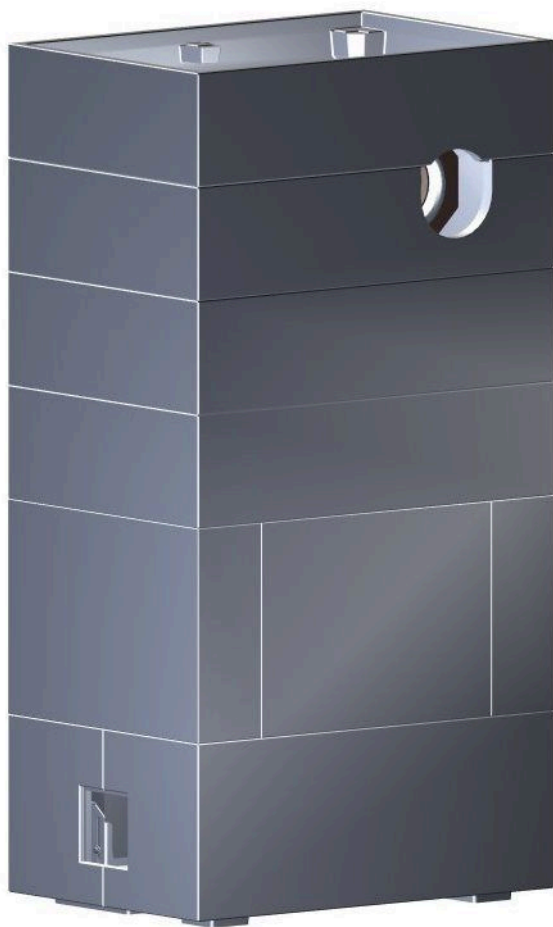


Im. 21: set on the upper ring

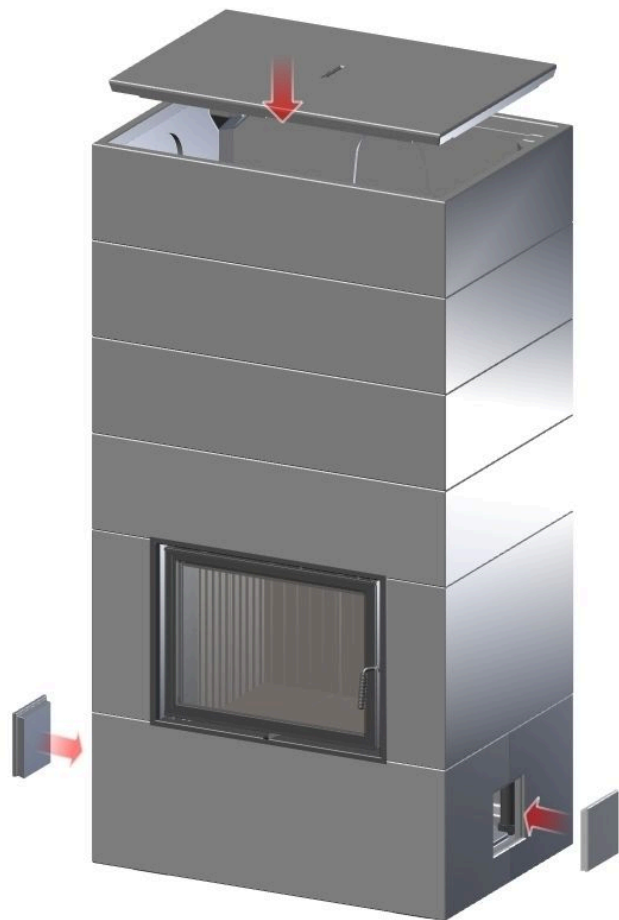


Im. 22: fix the cover plate

7 SEQUENCE OF ASSAMBLY WITH ADJACENT MSS

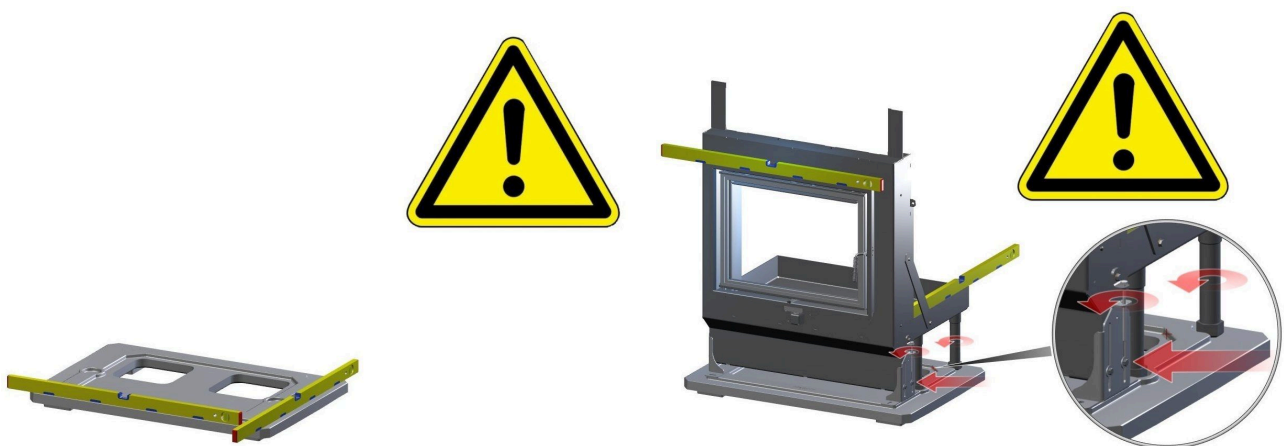


Im. 23: align the bottom plate


Im. 24: set up the door with the support frame

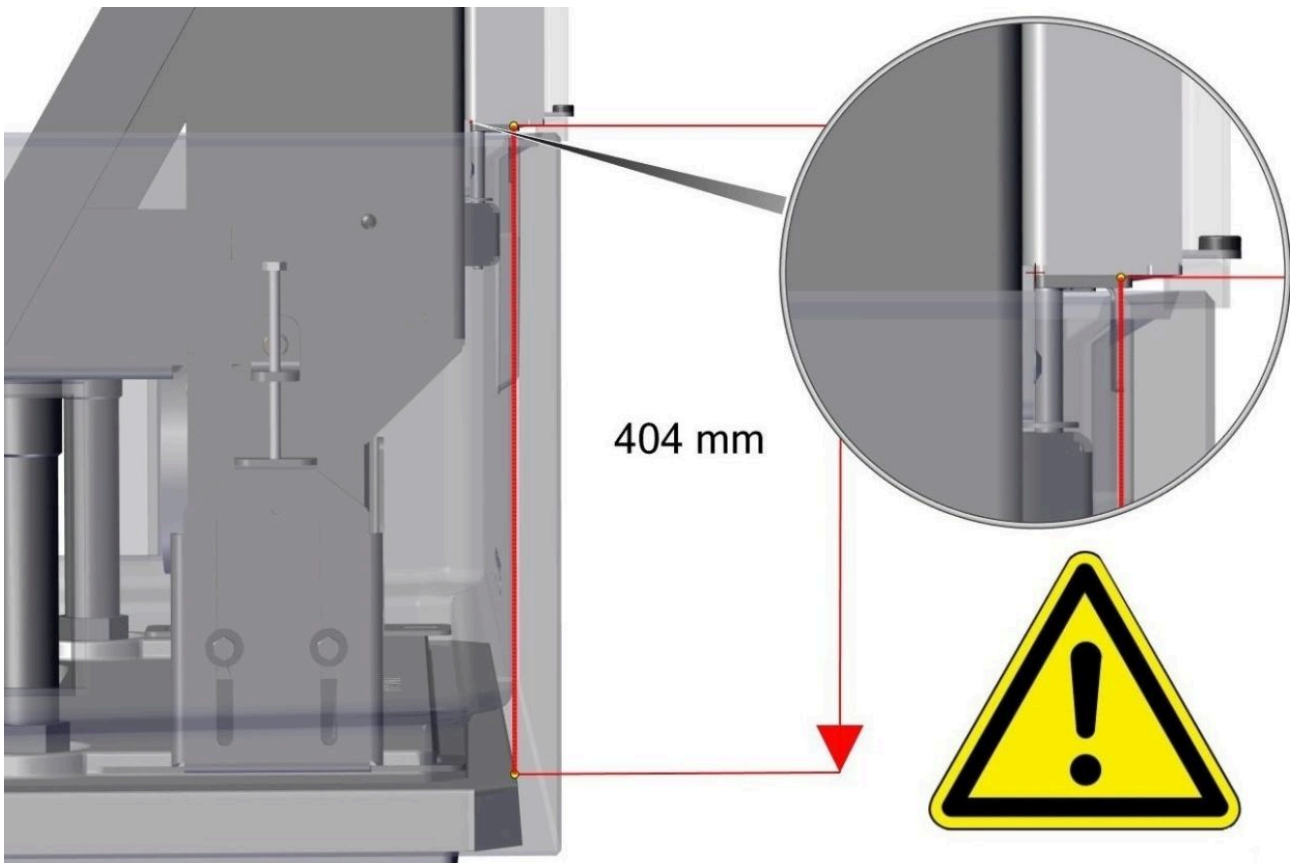

Im. 25: adjust height

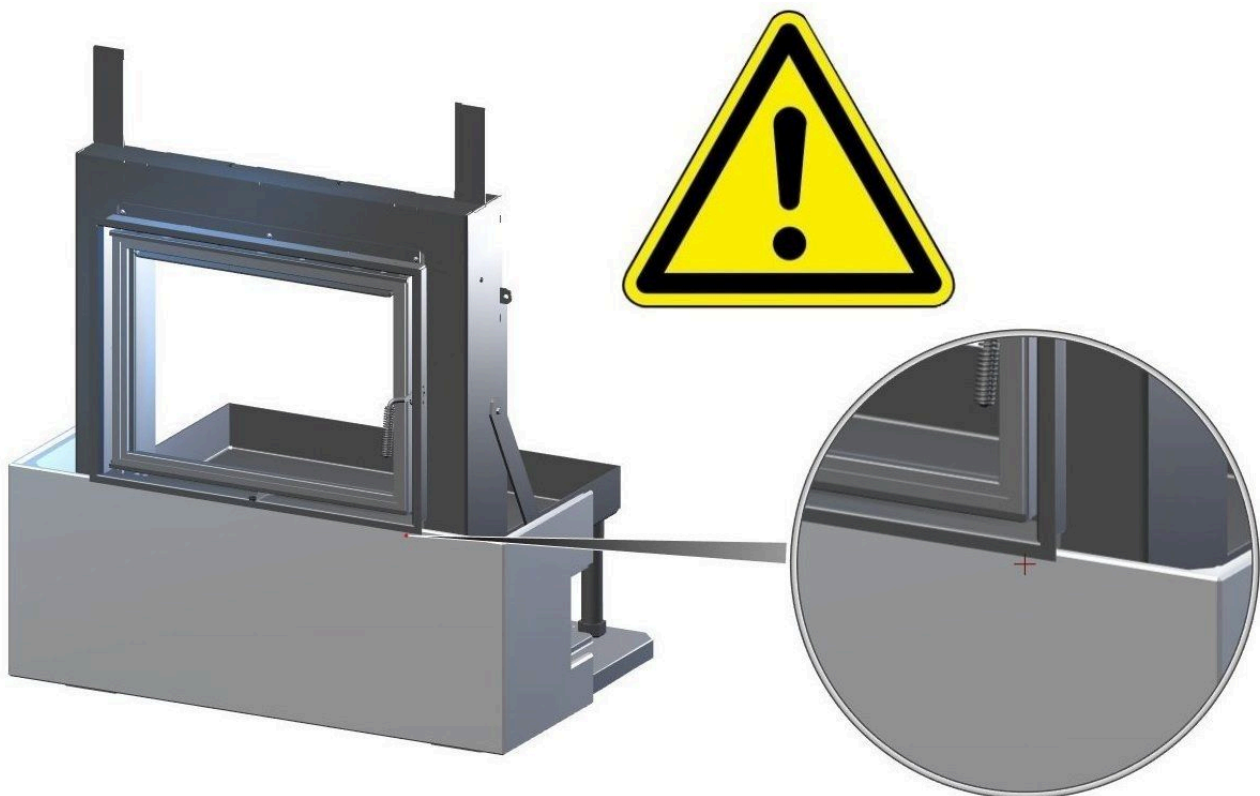


Im. 26: set up the base ring 2

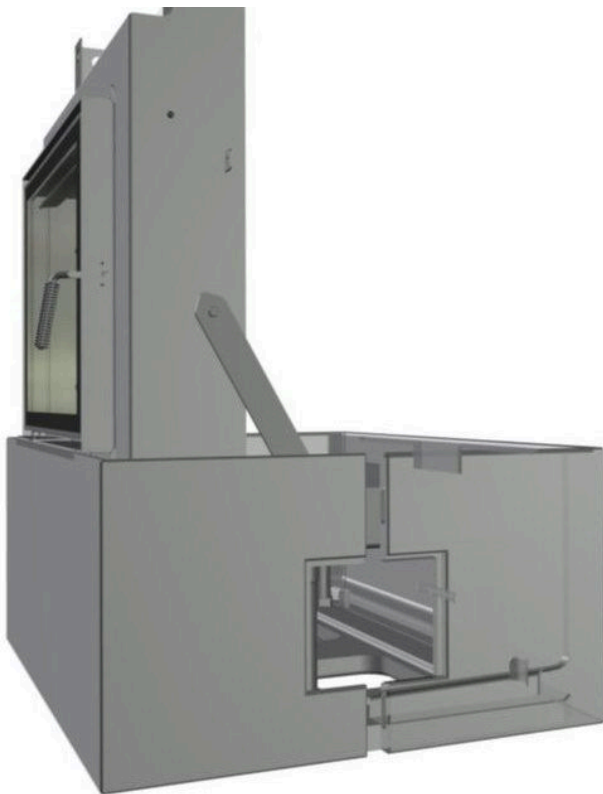


Im. 27: set up the second base ring


Siehe Aufbauanleitung GOF!

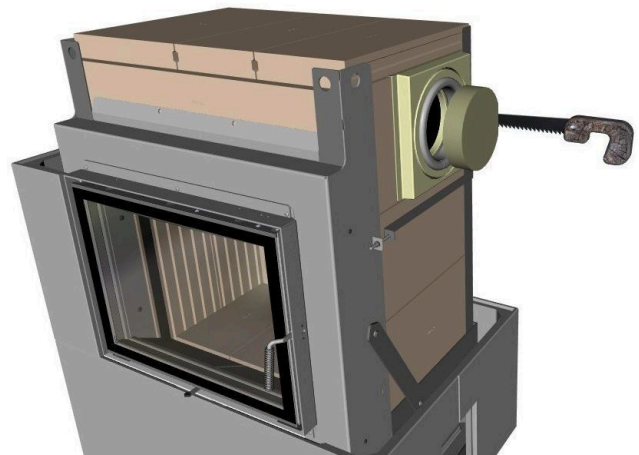

Im. 28: put in the masonry heater and cut out burnout

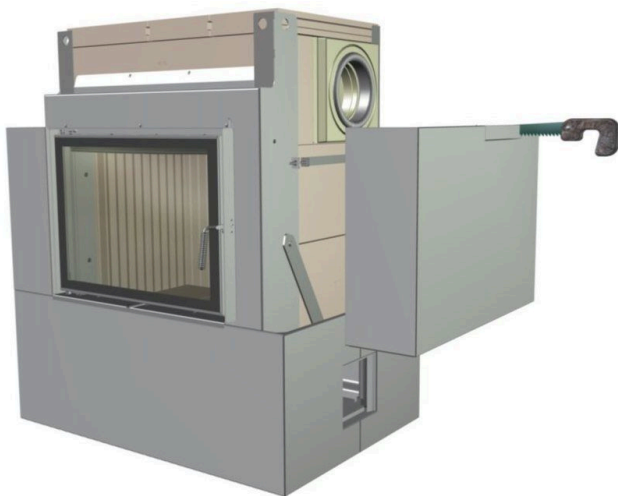


Im. 29: place and cut out concrete elements for the MSS adapter connection

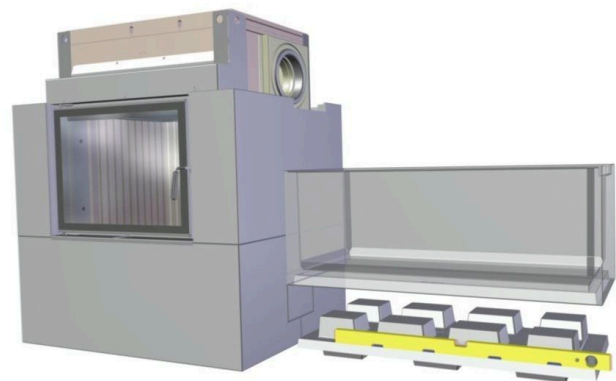


Im. 30: place the base plate and first concrete ring for the storage block. Set the backs of the concrete parts flush


When assembling the MSS components, it is essential to follow the MSS assembly instructions! The installation with adhesive and steel rings is not described in detail here.

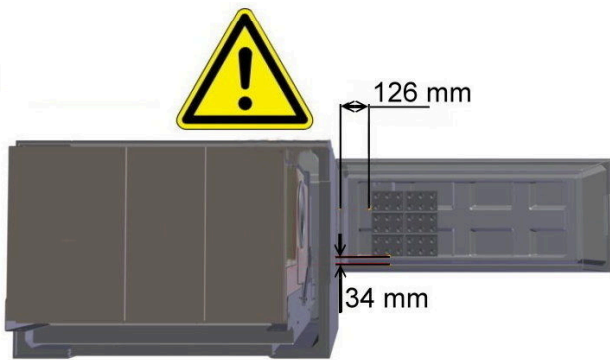


Im. 31: align the base stone

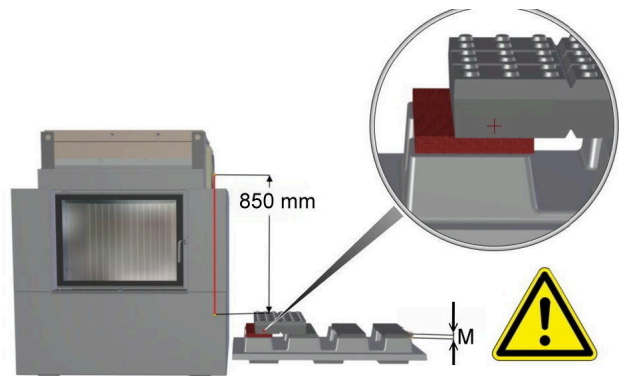

Im. 32: place the base stones on the calculated mortar bed

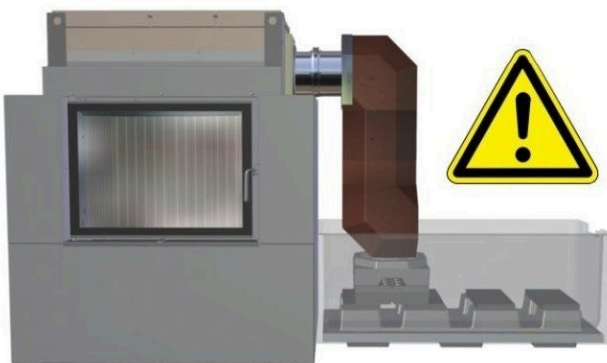


Im. 33: place the floor insulating block and dry the test setup to check the connection height.

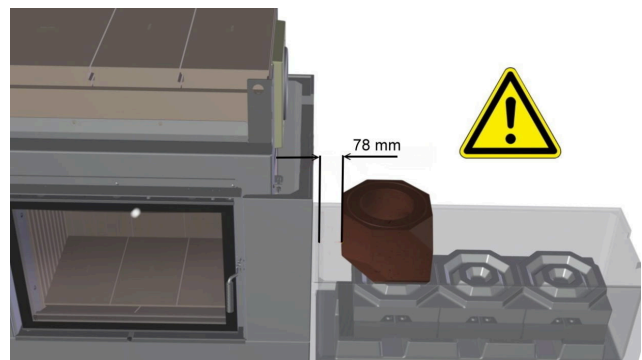


Im. 34: Set the floor insulation blocks dry and align the first bow


The individual rows of MSS elements must be fixed with a tension belt until the connection points are finally tied off. Remove the tension belts again after tying off!

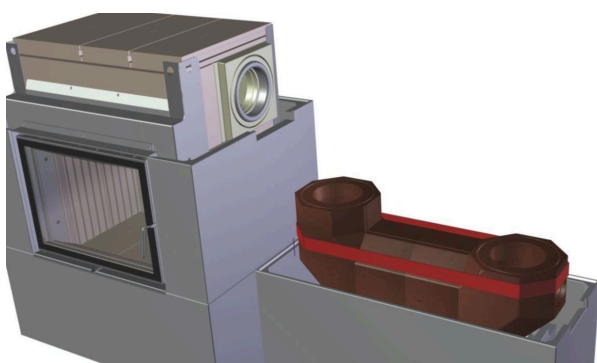


Im. 35: set the bottom row and secure with a tension belt

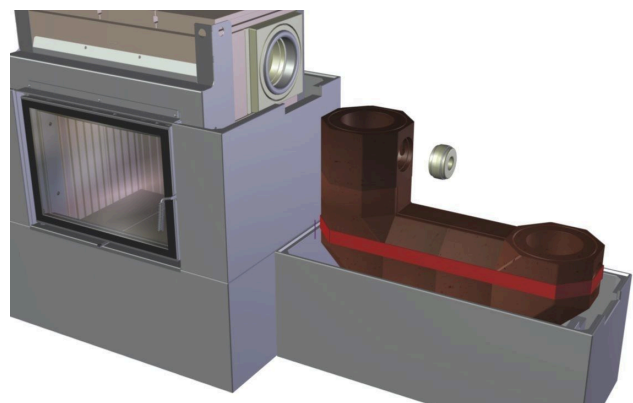


Im. 36: place the first element of row 2 and insert the bypass element

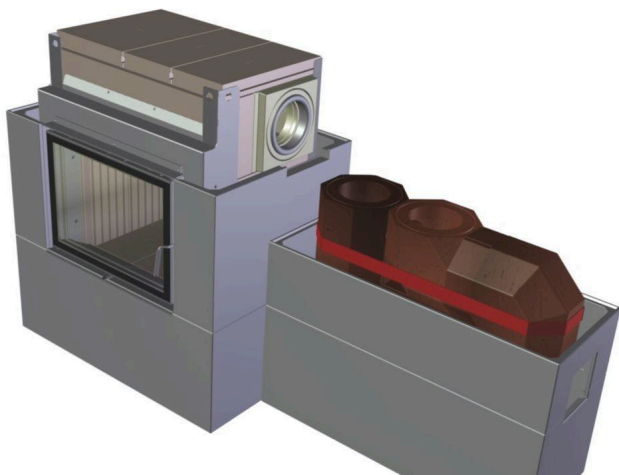


Im. 37: place and secure the second row and place the second concrete ring

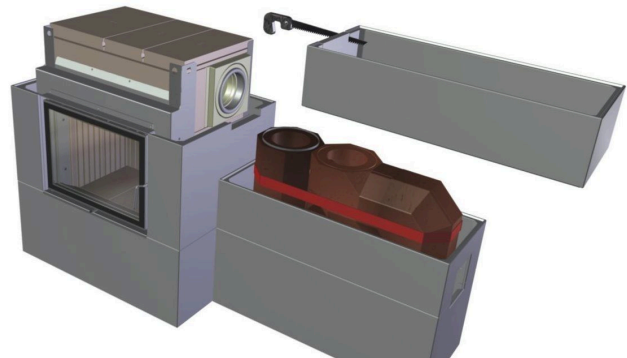


Im. 38: place and cut out the third concrete ring for the MSS adapter

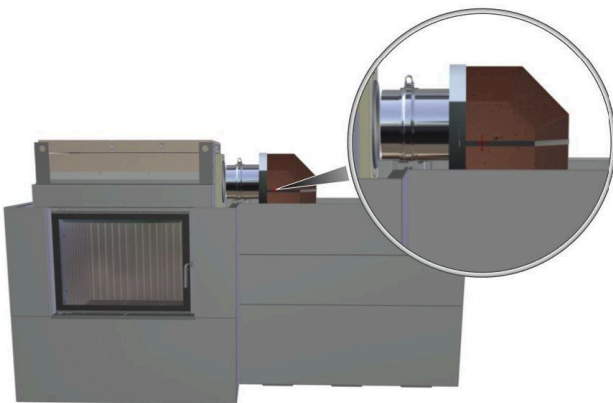


Im. 39: mount burnout MSS adapter and fasten with steel band.

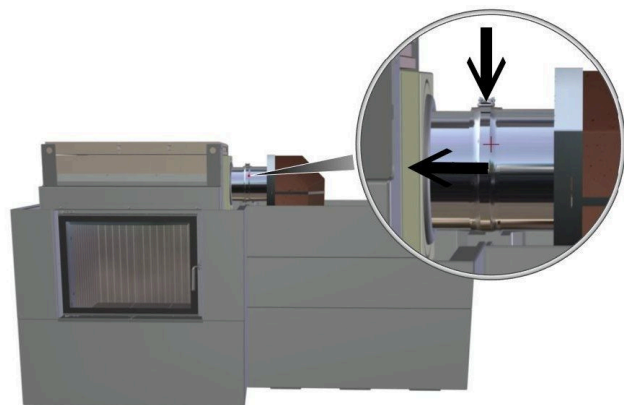

Im. 40: insert the inner tube of the MSS adapter into the connection block, seal with the seal provided and close the bracket

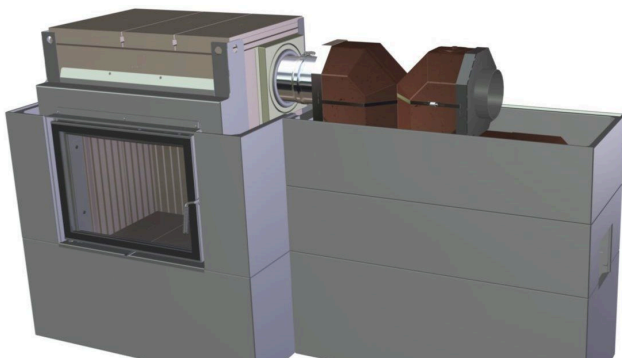

Im. 41: mount burnout MSS adapter and fasten with steel band

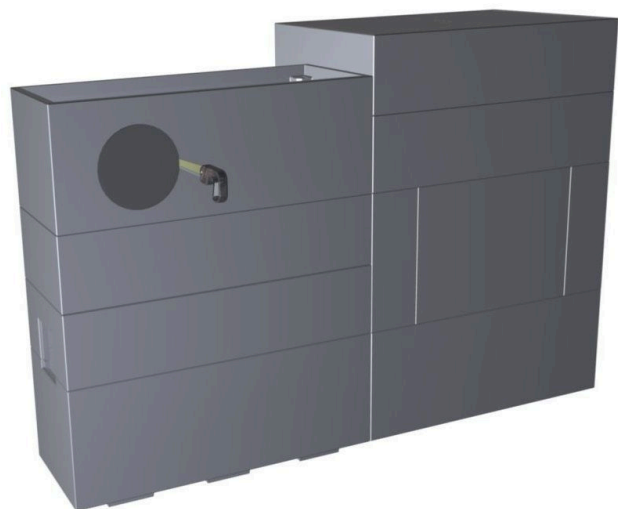

Im. 42: place upper rings and cut out burnout, then put the lid on

8 ASSEMBLY

Sequence of assembly

For sequence of assembly, please follow the instructions in chapter 'Sequence of assembly'. It shows each and every step of assembly.

Always keep to the specified order!

The single elements must be examined closely before installation to ensure correct position. Don't forget the pointwise bonding of elements with acrylic adhesive.

The assembly sequence of protective panels is only an example and can be different in various cases.

Fireplace insert

To compensate for the different thermal expansions between the fireplace insert and casing, a gap of ca. 2-3 mm must be left around the doors.



If the fireplace casing is in direct contact with the fireplace insert, it leads to damage of the fireplace casings, which are not covered by our warranty.



The mounting frame must have an overlap of about 4 mm.

Breakthroughs and breakouts


Breakthroughs for smoke pipe connection, air gratings or other components within the fireplace casing must be created on site. These are to be made with extreme caution to prevent breakage of the components.

Damage caused by improper work is not covered by the warranty.

The safest way to create the breakthroughs is using a jigsaw.

Setting of the ring elements

The ring elements of the fireplace casings must be lifted over the fireplace insert previously set on the base plate. To avoid damages during setting, it is recommended to place the elements on pieces of wood, and then set down the ring element carefully after pulling out the wood pieces.

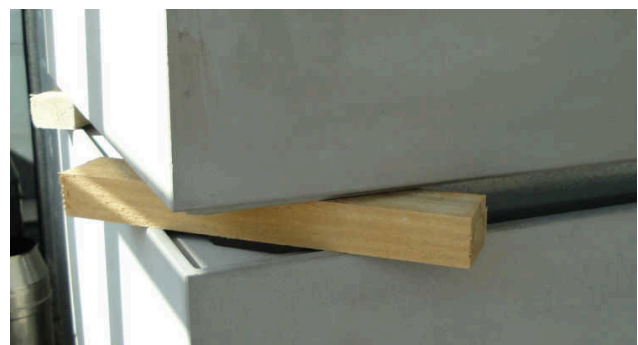

Im. 43: Wood pieces as supports

Plastering

Before plastering the fireplace casing, the fireplace should have been heated once. As a result, the fireplace casing can expand and break down the biggest stresses. This prevents or reduces subsequent cracks in the surface of the plastered fireplace.

The surface of the fireplace casing must be cleaned with a damp cloth. A pre-wetting of the surface is not required.

Keep processing temperature above 5°C (41 deg. Fahrenheit).

To avoid stress cracks as much as possible, a fiberglass mesh is applied with adhesive plaster (optional) Brunner Universal (Art.Nr.: 900384) or Brunner Spezial (Art.Nr.: 900284) on the fireplace casing.




The actual plaster layer is then drawn with adhesive plaster over this layer.



Please note the processing instructions for the adhesive plaster.





Excerpt from the processing instructions: Mix dry mass before removal of processing volumes in a clean container. Set small quantities in a mason pan with a spatula or trowel with clean tap water into application-specific consistency and process quickly; for large-area coating, stir with a mortar agitator in low speed intensively, allow to soak, stir again and then process quickly.

Dimension sheets - BSG 01 with MSS

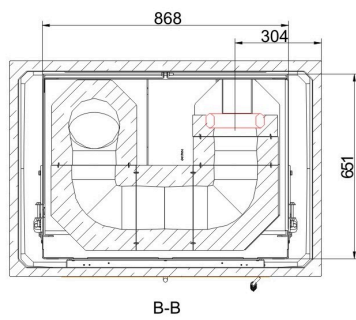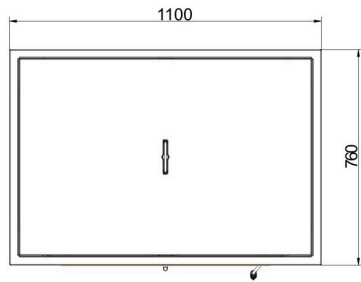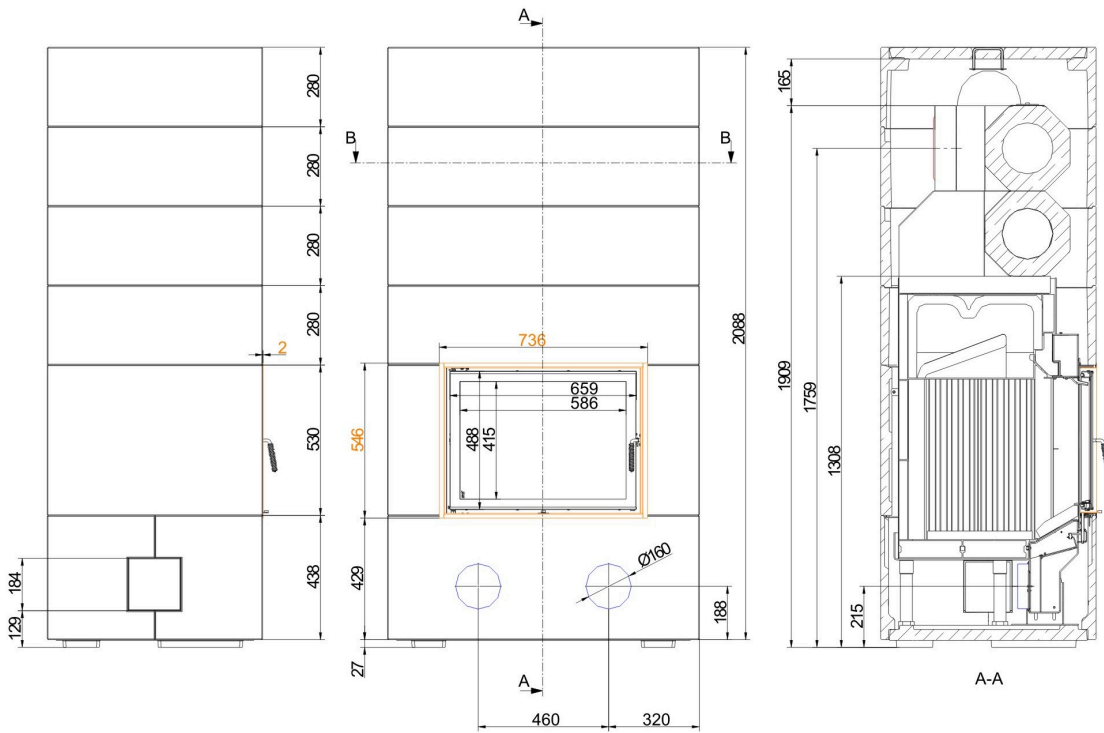

... top-mount

Dimension sheets - BSG 01 with MSS

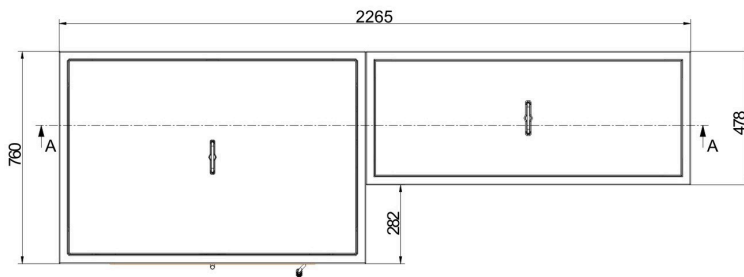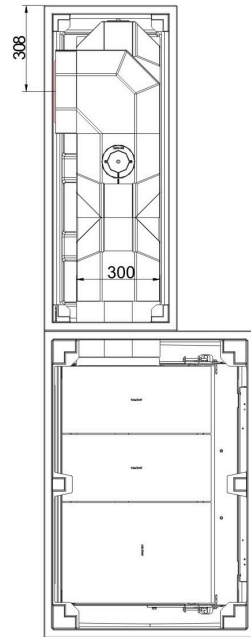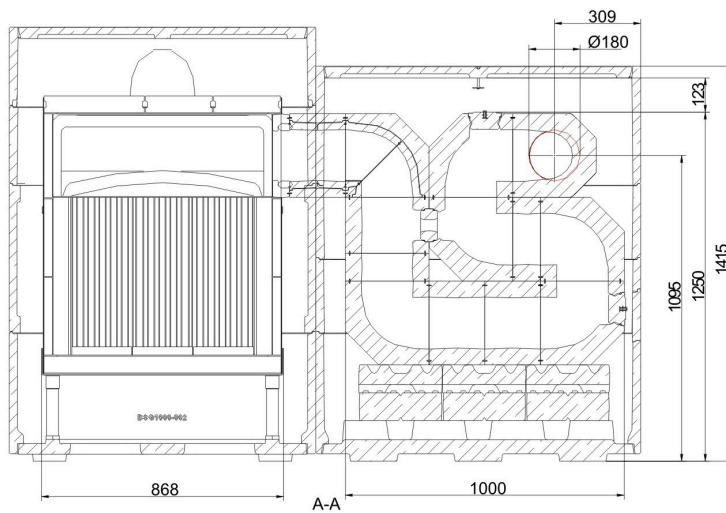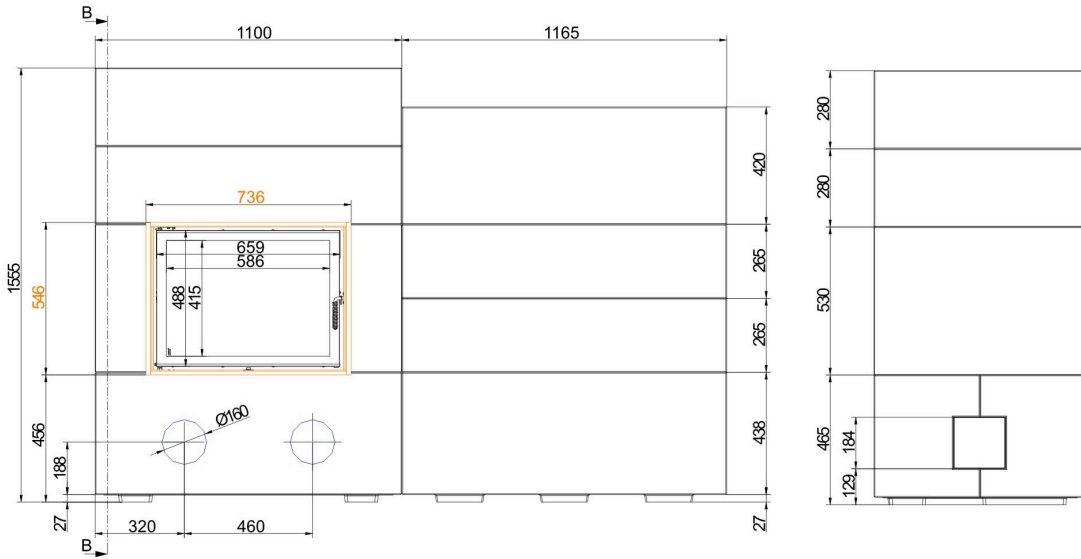

... adjacent

We suggest for CAD planning Palette CAD. Permanent updated drawings: www.brunner.de
 Frames/ flue gas outlet connection/ combustion air supply connection/ front variants/ support bearing are marked in color.

Planning and installation - BSG 01 with MSS

Tested according to		EN 15250	EN 15250
Values measured at		top-mount MSS	adjacent MSS
Data for functional demonstration			
System power ¹⁾	kW	2.2	2.8
Fire wood volume	kg/h	7.9	8.3
Combustion duration	h	2	2
Time of heat release ²⁾	h	12	12
Combustion performance	kW	31.6	33.2
Flue gas mass flow	g/s	24.4	25.5
Outlet temperature (before reheating surface)	°C	550	550
Flue gas temperature after:			
accumulation stones (MSS)	°C	195	190
Necessary supply pressure	Pa	13	13
Total fuel load	kg	12	17
Load of wood 1st/2nd combustion cycle	kg	8 + 4	9 + 8
Combustion air consumption	m ³ /h	71	74
Combustion air connection Ø	mm	160	160
Minimal distances			
to mounting wall	cm	5	5
to combustible mounting wall	cm	10	10
from top of fireplace to ceiling	cm	30	30
Heat distribution			
Insert / reheating surface	%	30 / 50	30 / 50
Glass pane (single / double)	%	- / 20	- / 20
Weight			
Combustion chamber / accumulator	kg	520 / 298	520 / 332
Cladding ³⁾	kg	443	734
Total weight	kg	1261	1586
Meets requirement/limit values for:			
Germany/ Austria / Switzerland / Norway		1.BImSchV (Stufe 2) / 15a BVG (2015) / LRV / -	

- 1) Average heating power of the system (heat storage duration) with load of wood 1st/2nd combustion cycle
- 2) Time from firing star to reaching 25% of the maximum surface temperature against the room temperature
- 3) Quality features of the cladding components in concrete look (fair-faced concrete class 2-3)

Dimensional tolerances of the casting mold parts

Straightness: +/- 2 mm/m

Length/width/thickness: +/- 2 mm

Squareness: +/- 2 mm

Flatness: +/- 2,5 mm

Surface to visible side

Textur: closed and largely uniform; repair areas with color changes and hairline cracks permissible.

Porosity: max. three holes with diameter <10 mm and depth <10 mm (reference area 100x100 mm).


Colour shade: uniform, large-area light/dark discolouration and cement haze permissible; no rust and dirt spots as well as different bulk layers.

Note: deviations in color tone (e.g. extension rings) can be adjusted by applying a glaze-like paint (our recommendation: DecoLasur Matt tinted in the colour shade Schiefer16, Caparol).

With the BRUNNER revision set (Art. No. 900300), touch-up work can be carried out on the cladding components.

Product data sheet according to (EU) 2015/1186:

Supplier's name or trademark	Ulrich Brunner GmbH
Model identifier:	BSG 01 MSS aufgesetzt
Energy efficiency class:	A+
Direct heat output:	2,2 kW
Indirect heat output:	N.A. kW
Energy efficiency index:	108,9
Fuel energy efficiency (at nominal heat output):	%
Fuel energy efficiency (at minimum load):	N.A. %
Special precautions: see supplied product documentation	

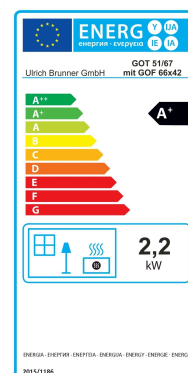

Ulrich Brunner GmbH
Zellhuber Ring 17-18
D-84307 Eggenfelden
Tel.: +49 (0) 8721/771-0 / Fax: +49 (0) 8721/771-100
Email: info@brunner.de

Technical and assortment changes as well as errors and misprints reserved.
Reprinting and reproduction, even in part, only with the express permission of the publisher.

Art. Nr.: 200352